


DIAMOND VITALE

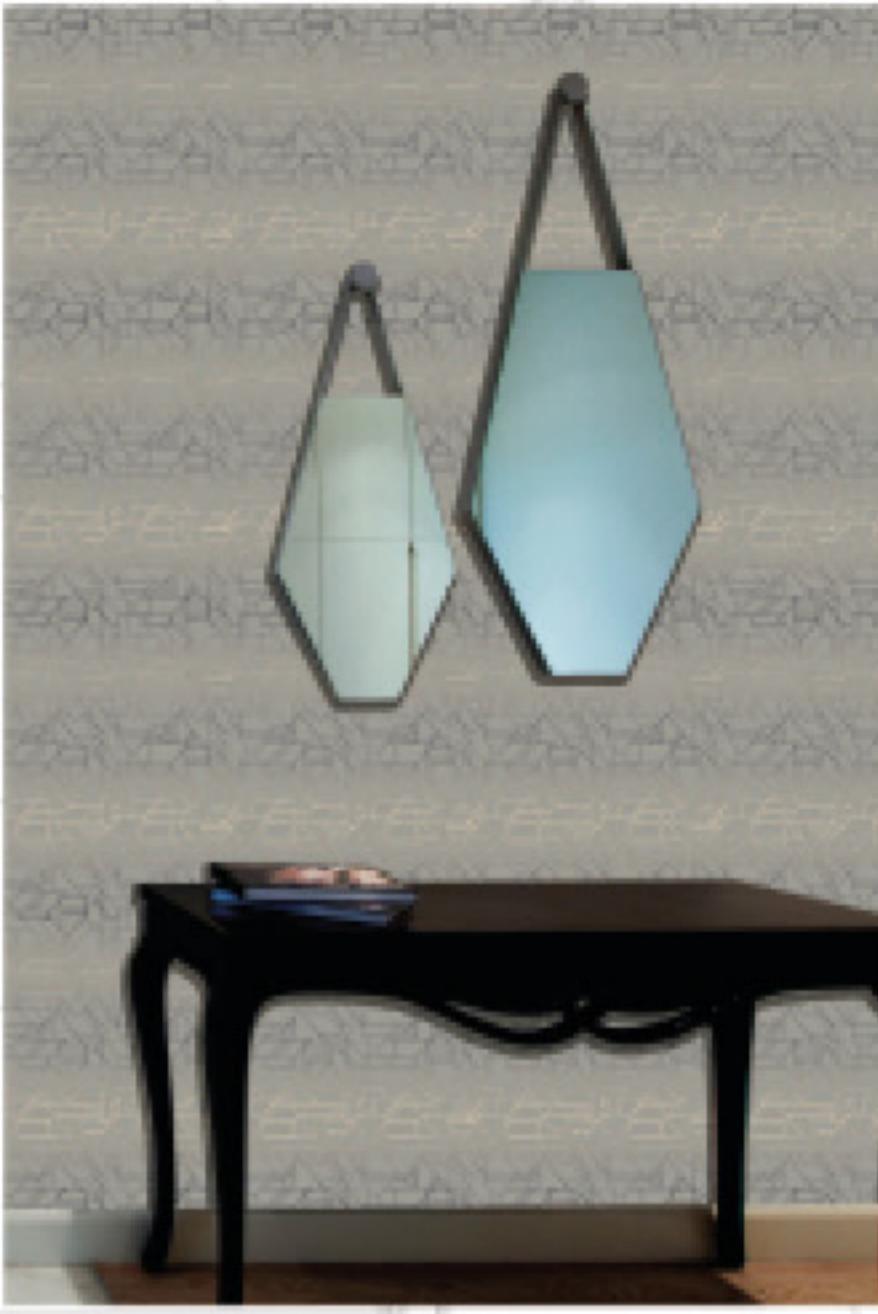




Art-Deco




Blessing




Phonix

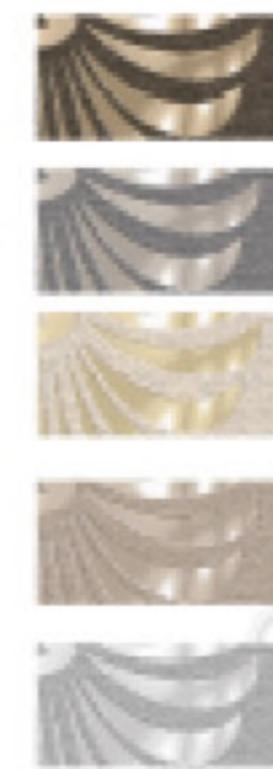

Project

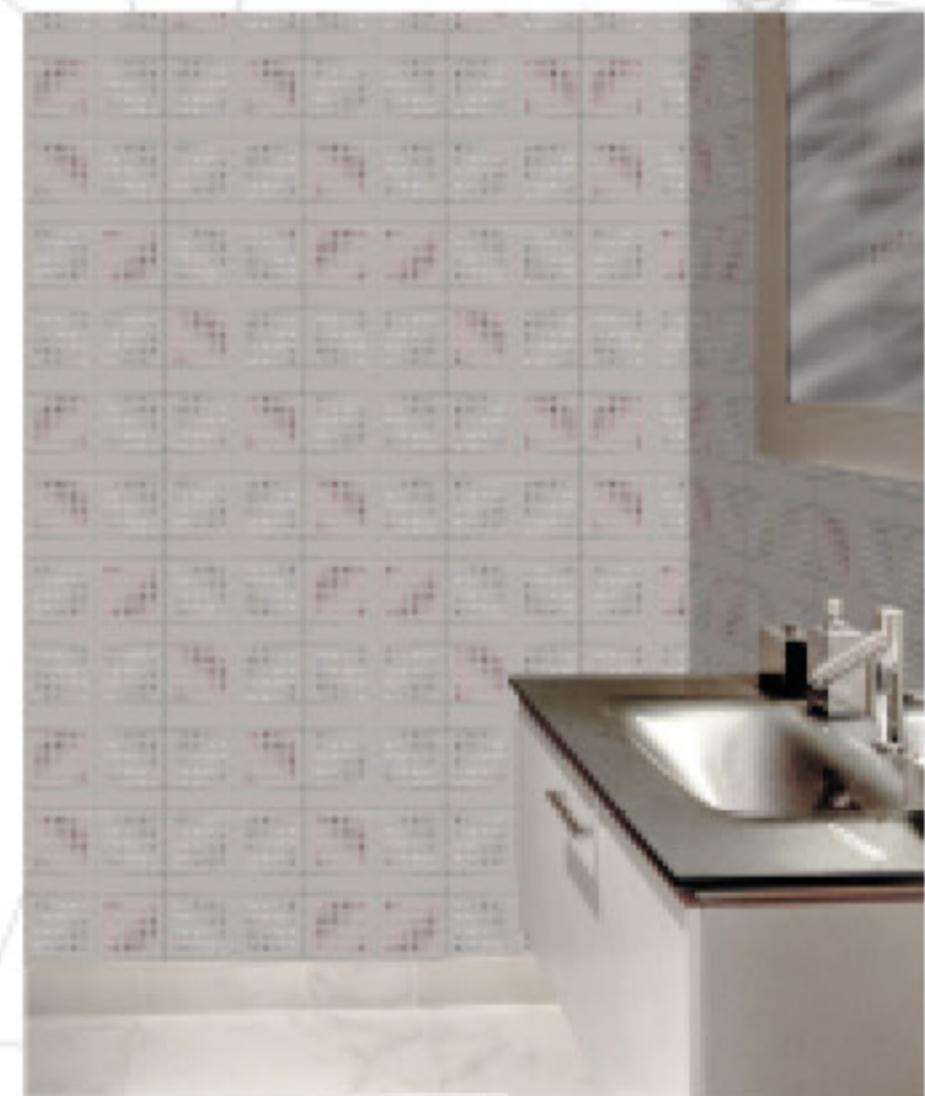


Dots

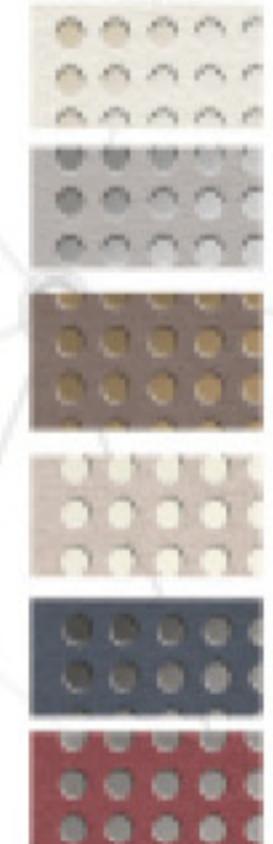


Iris



Soul

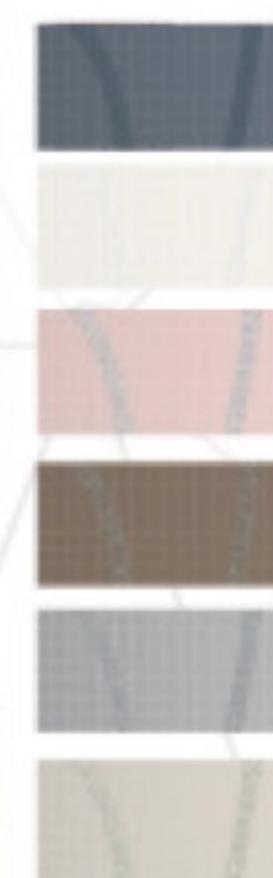

Sprial

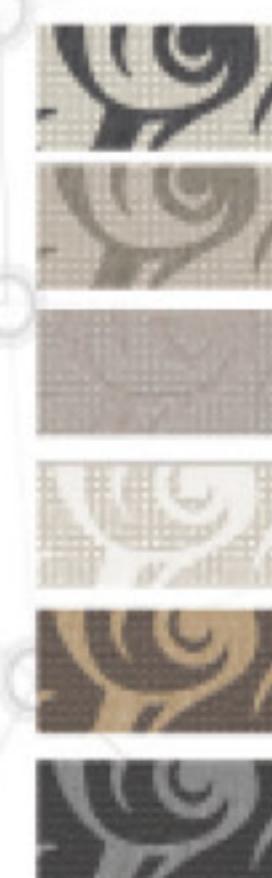




Art-Deco







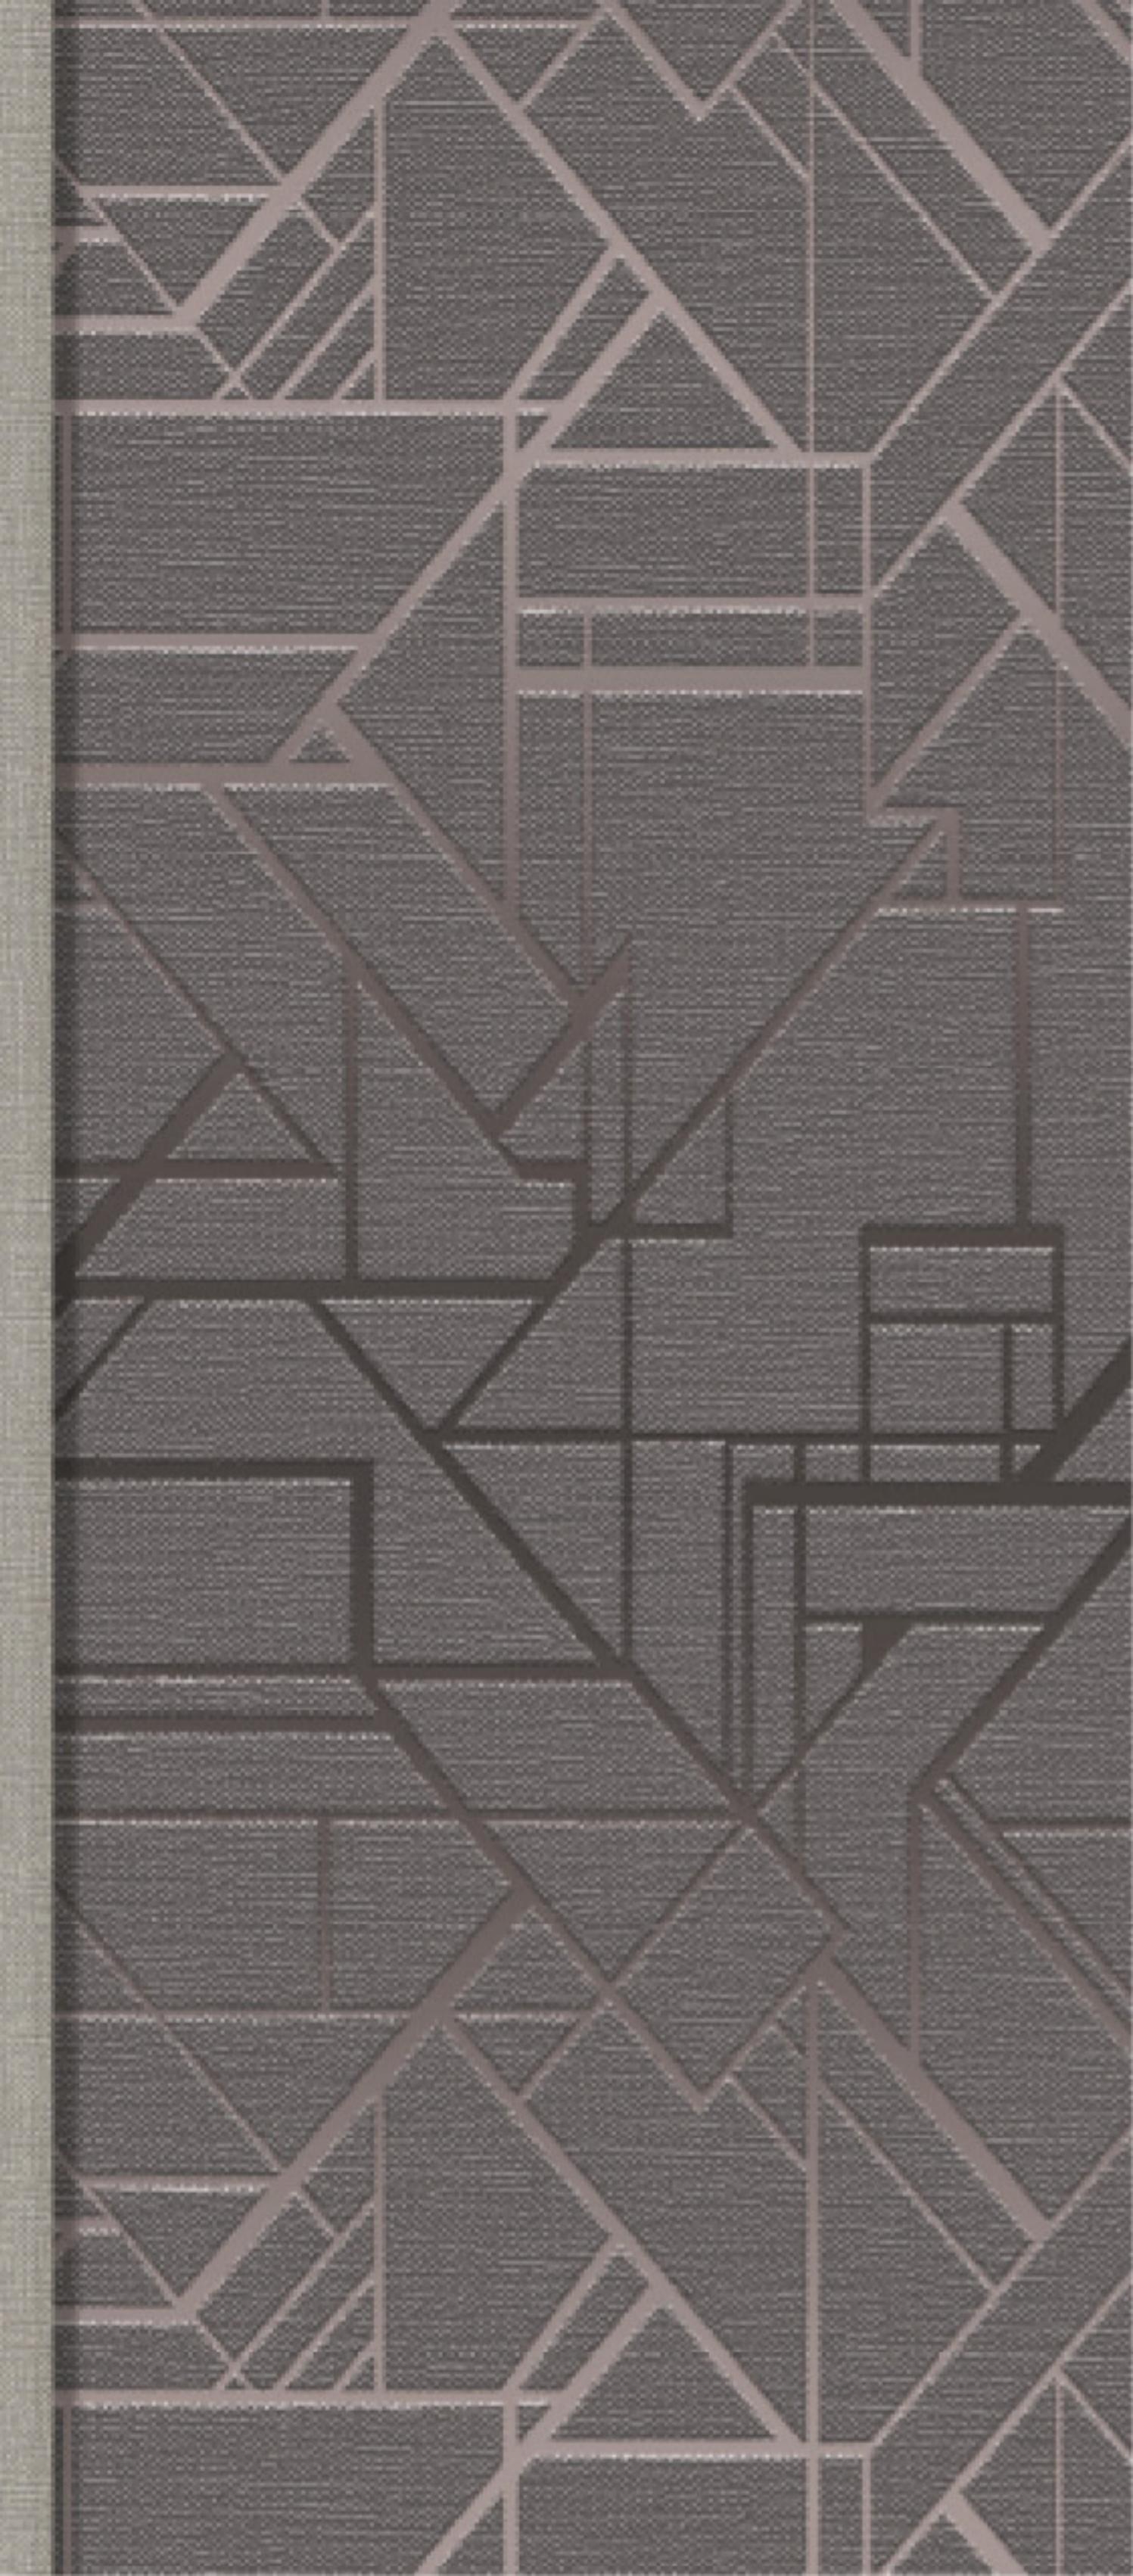








Blessing

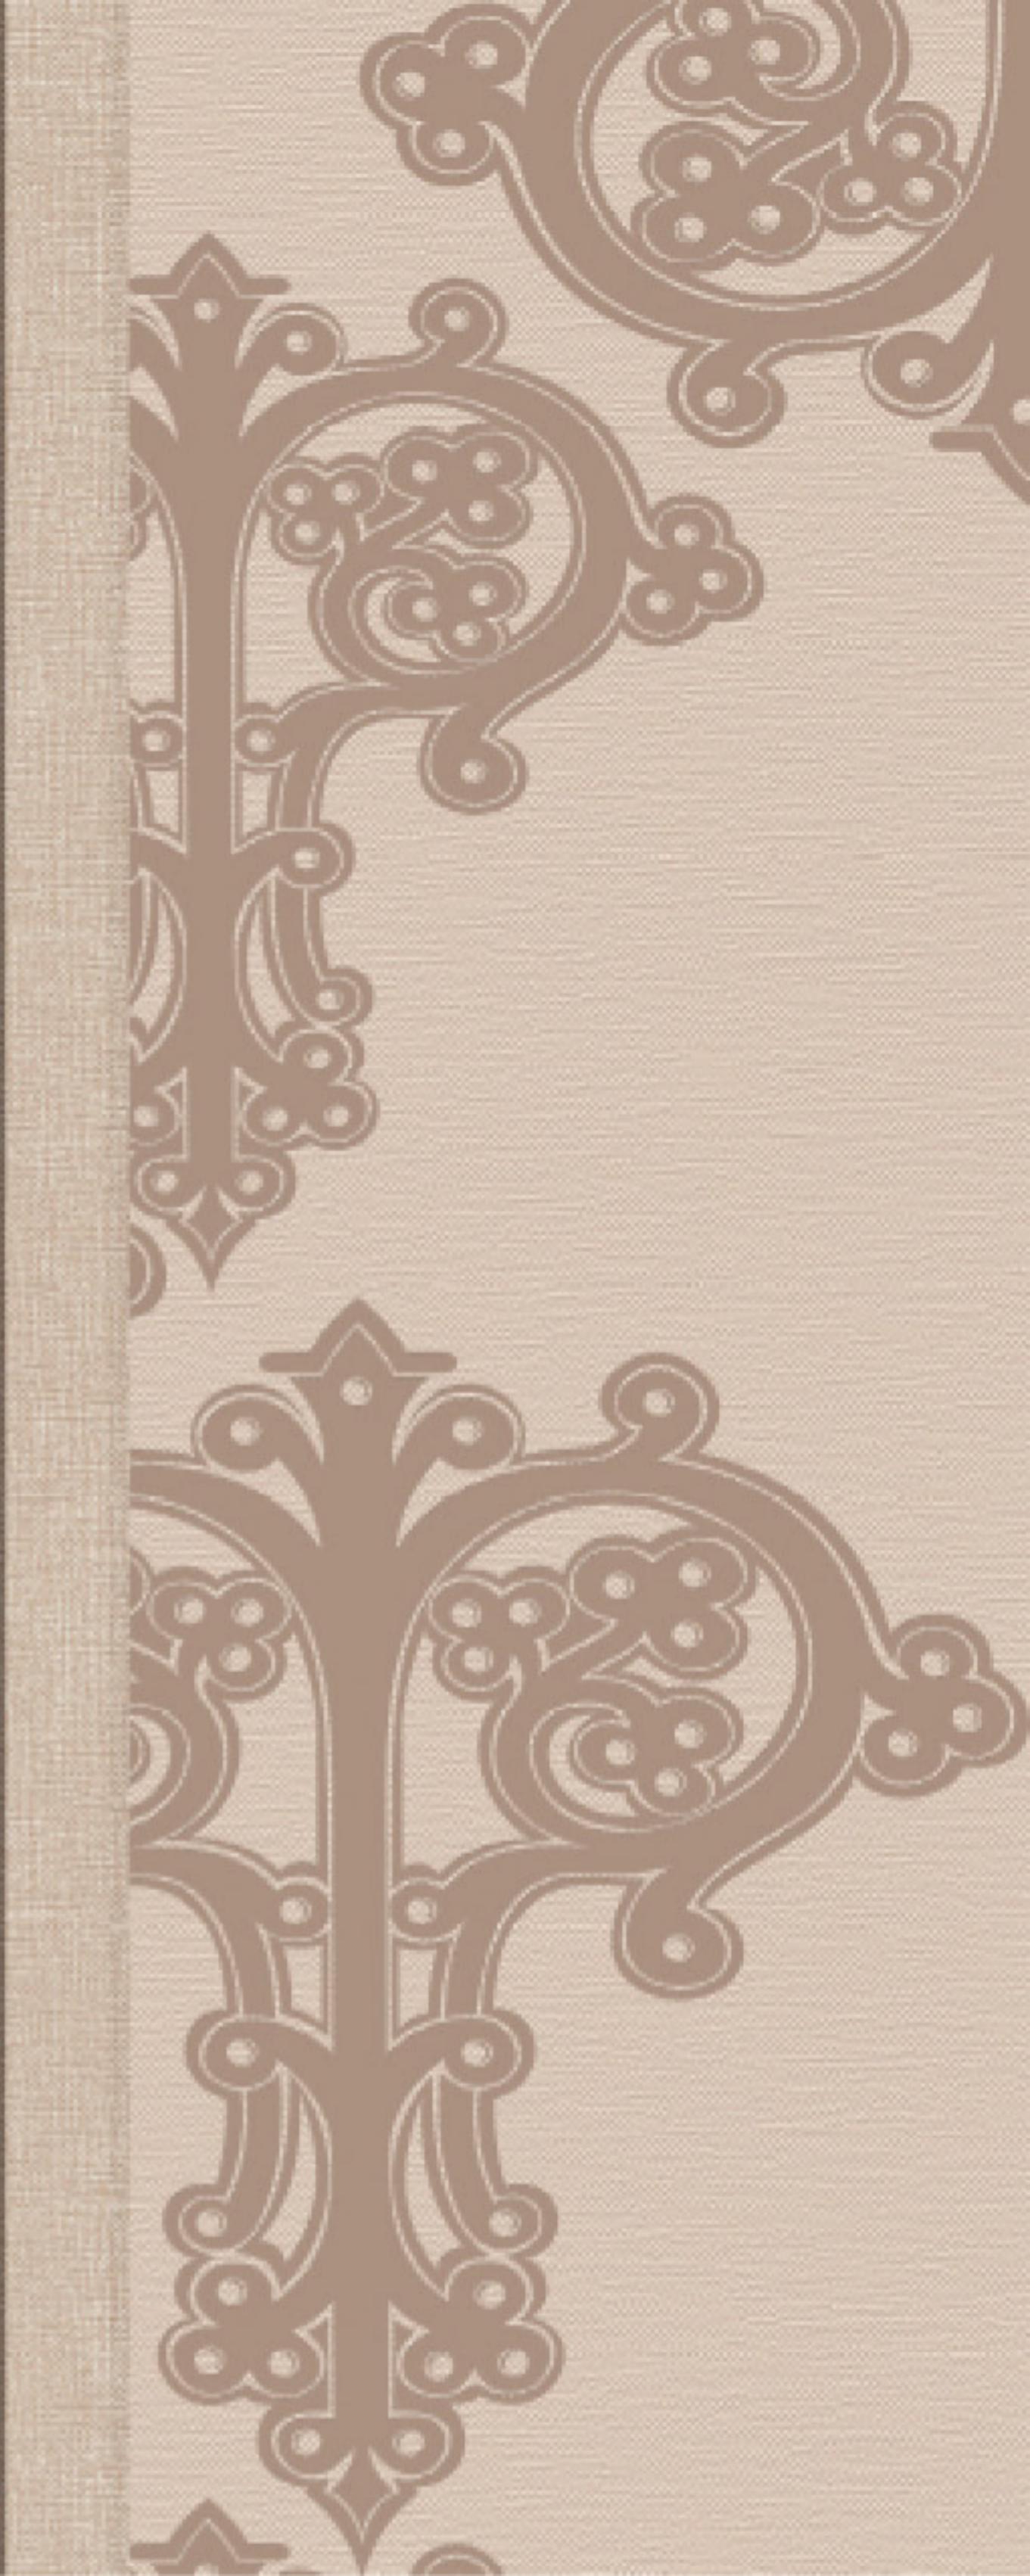
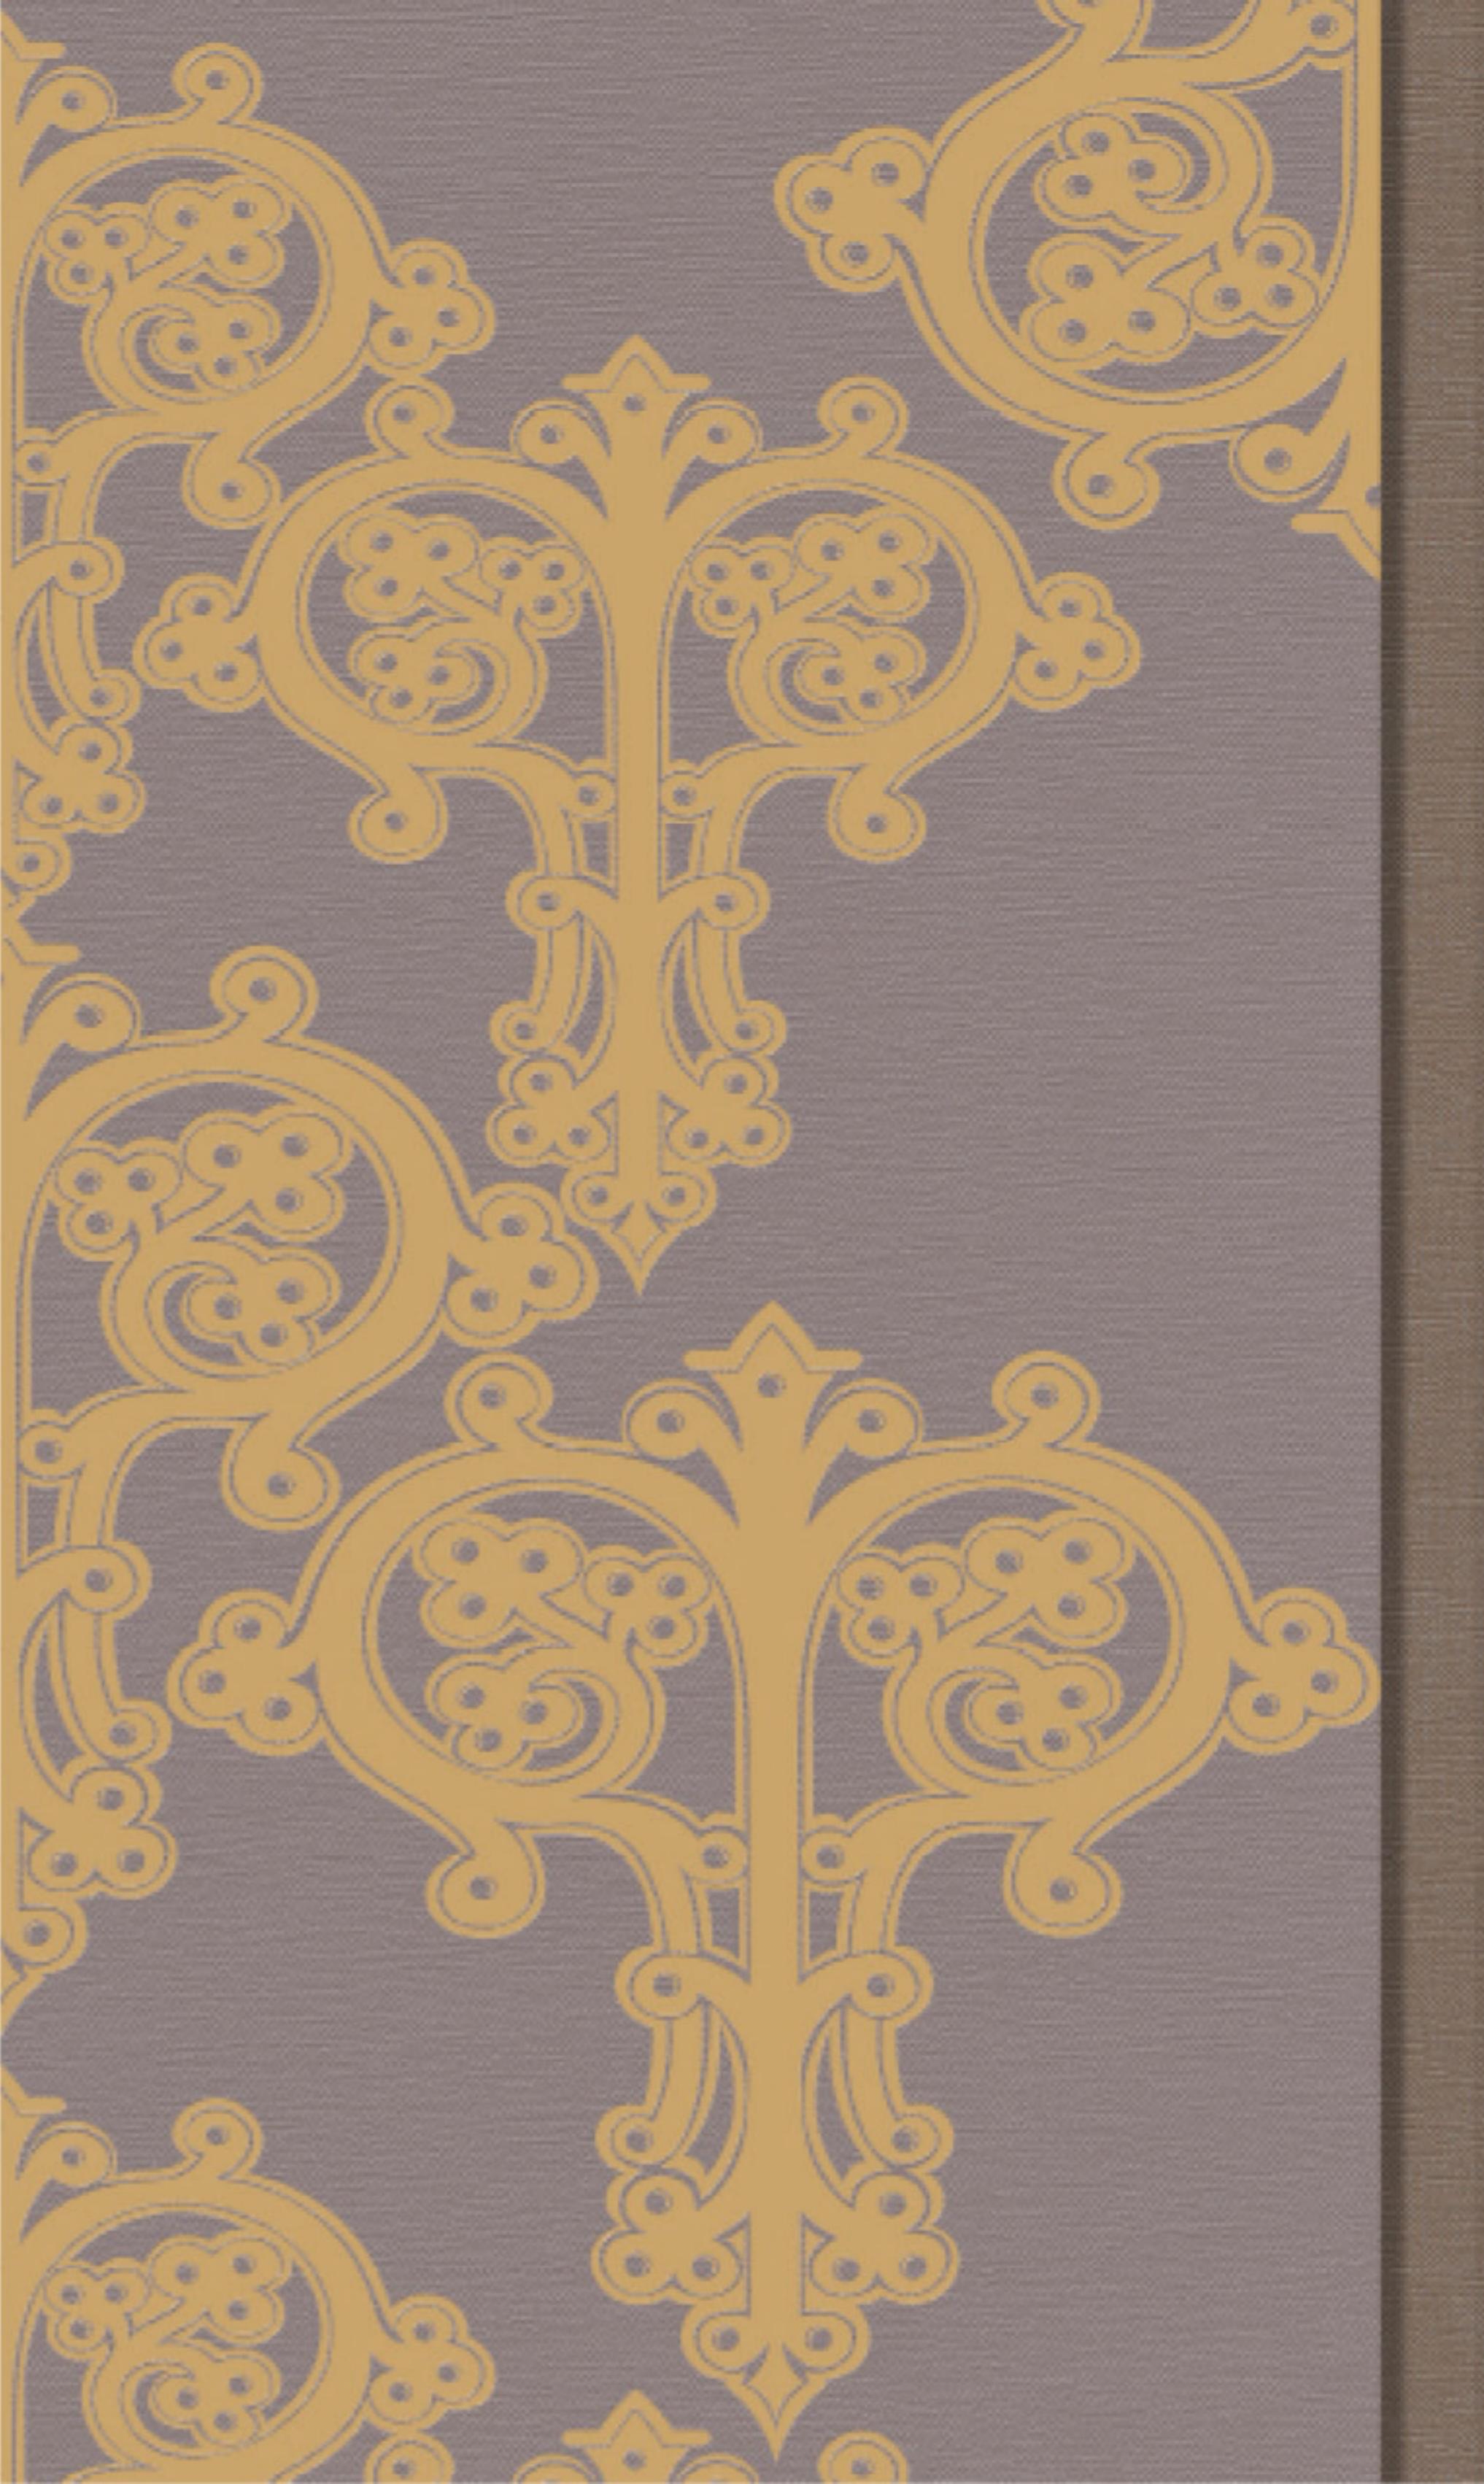





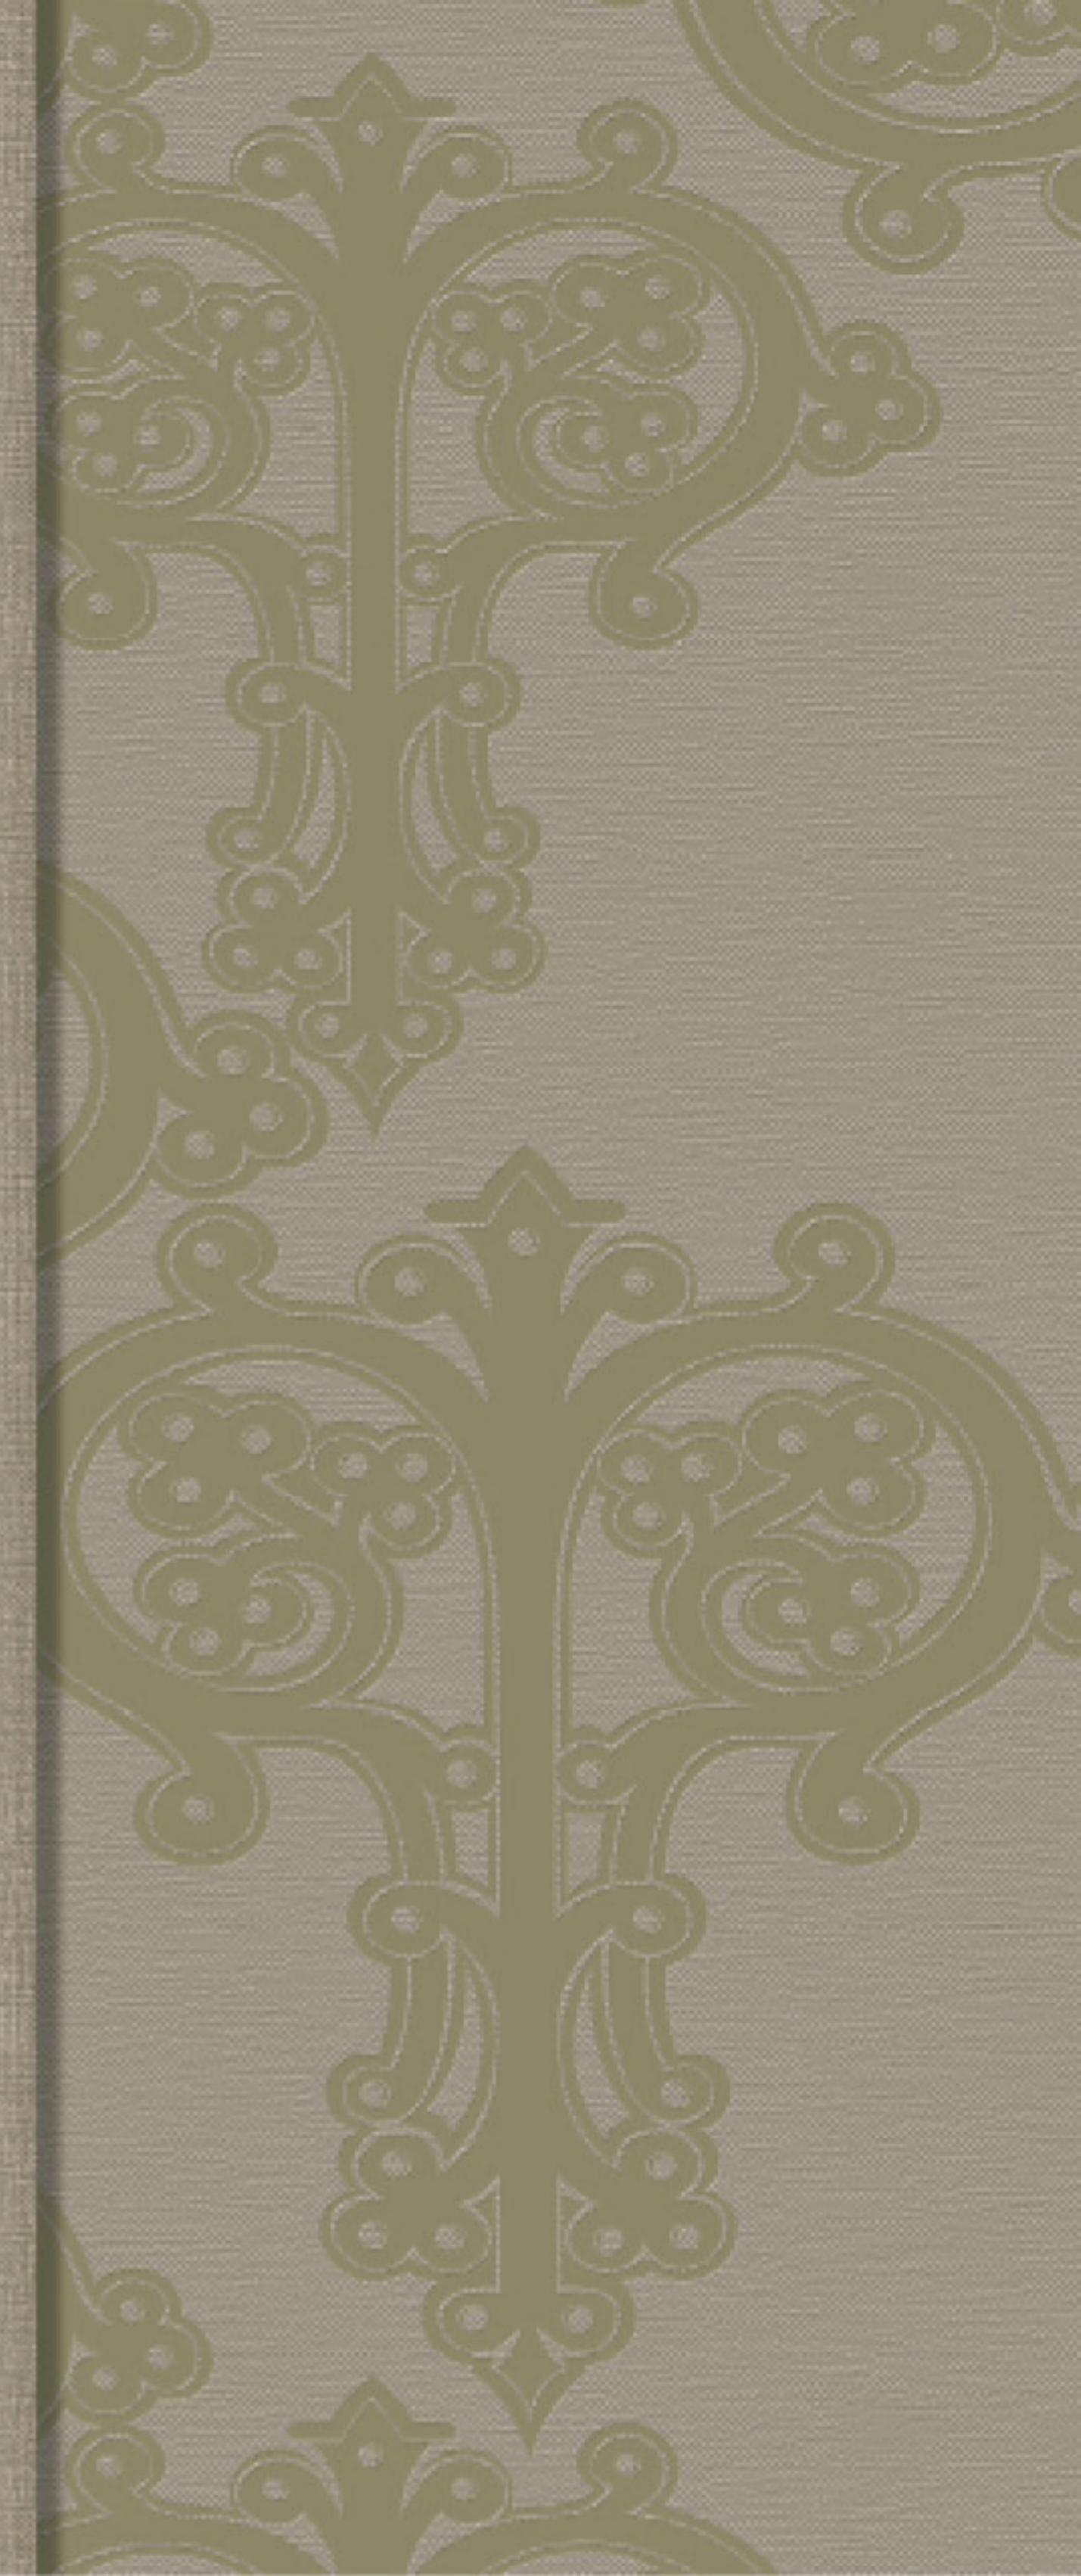


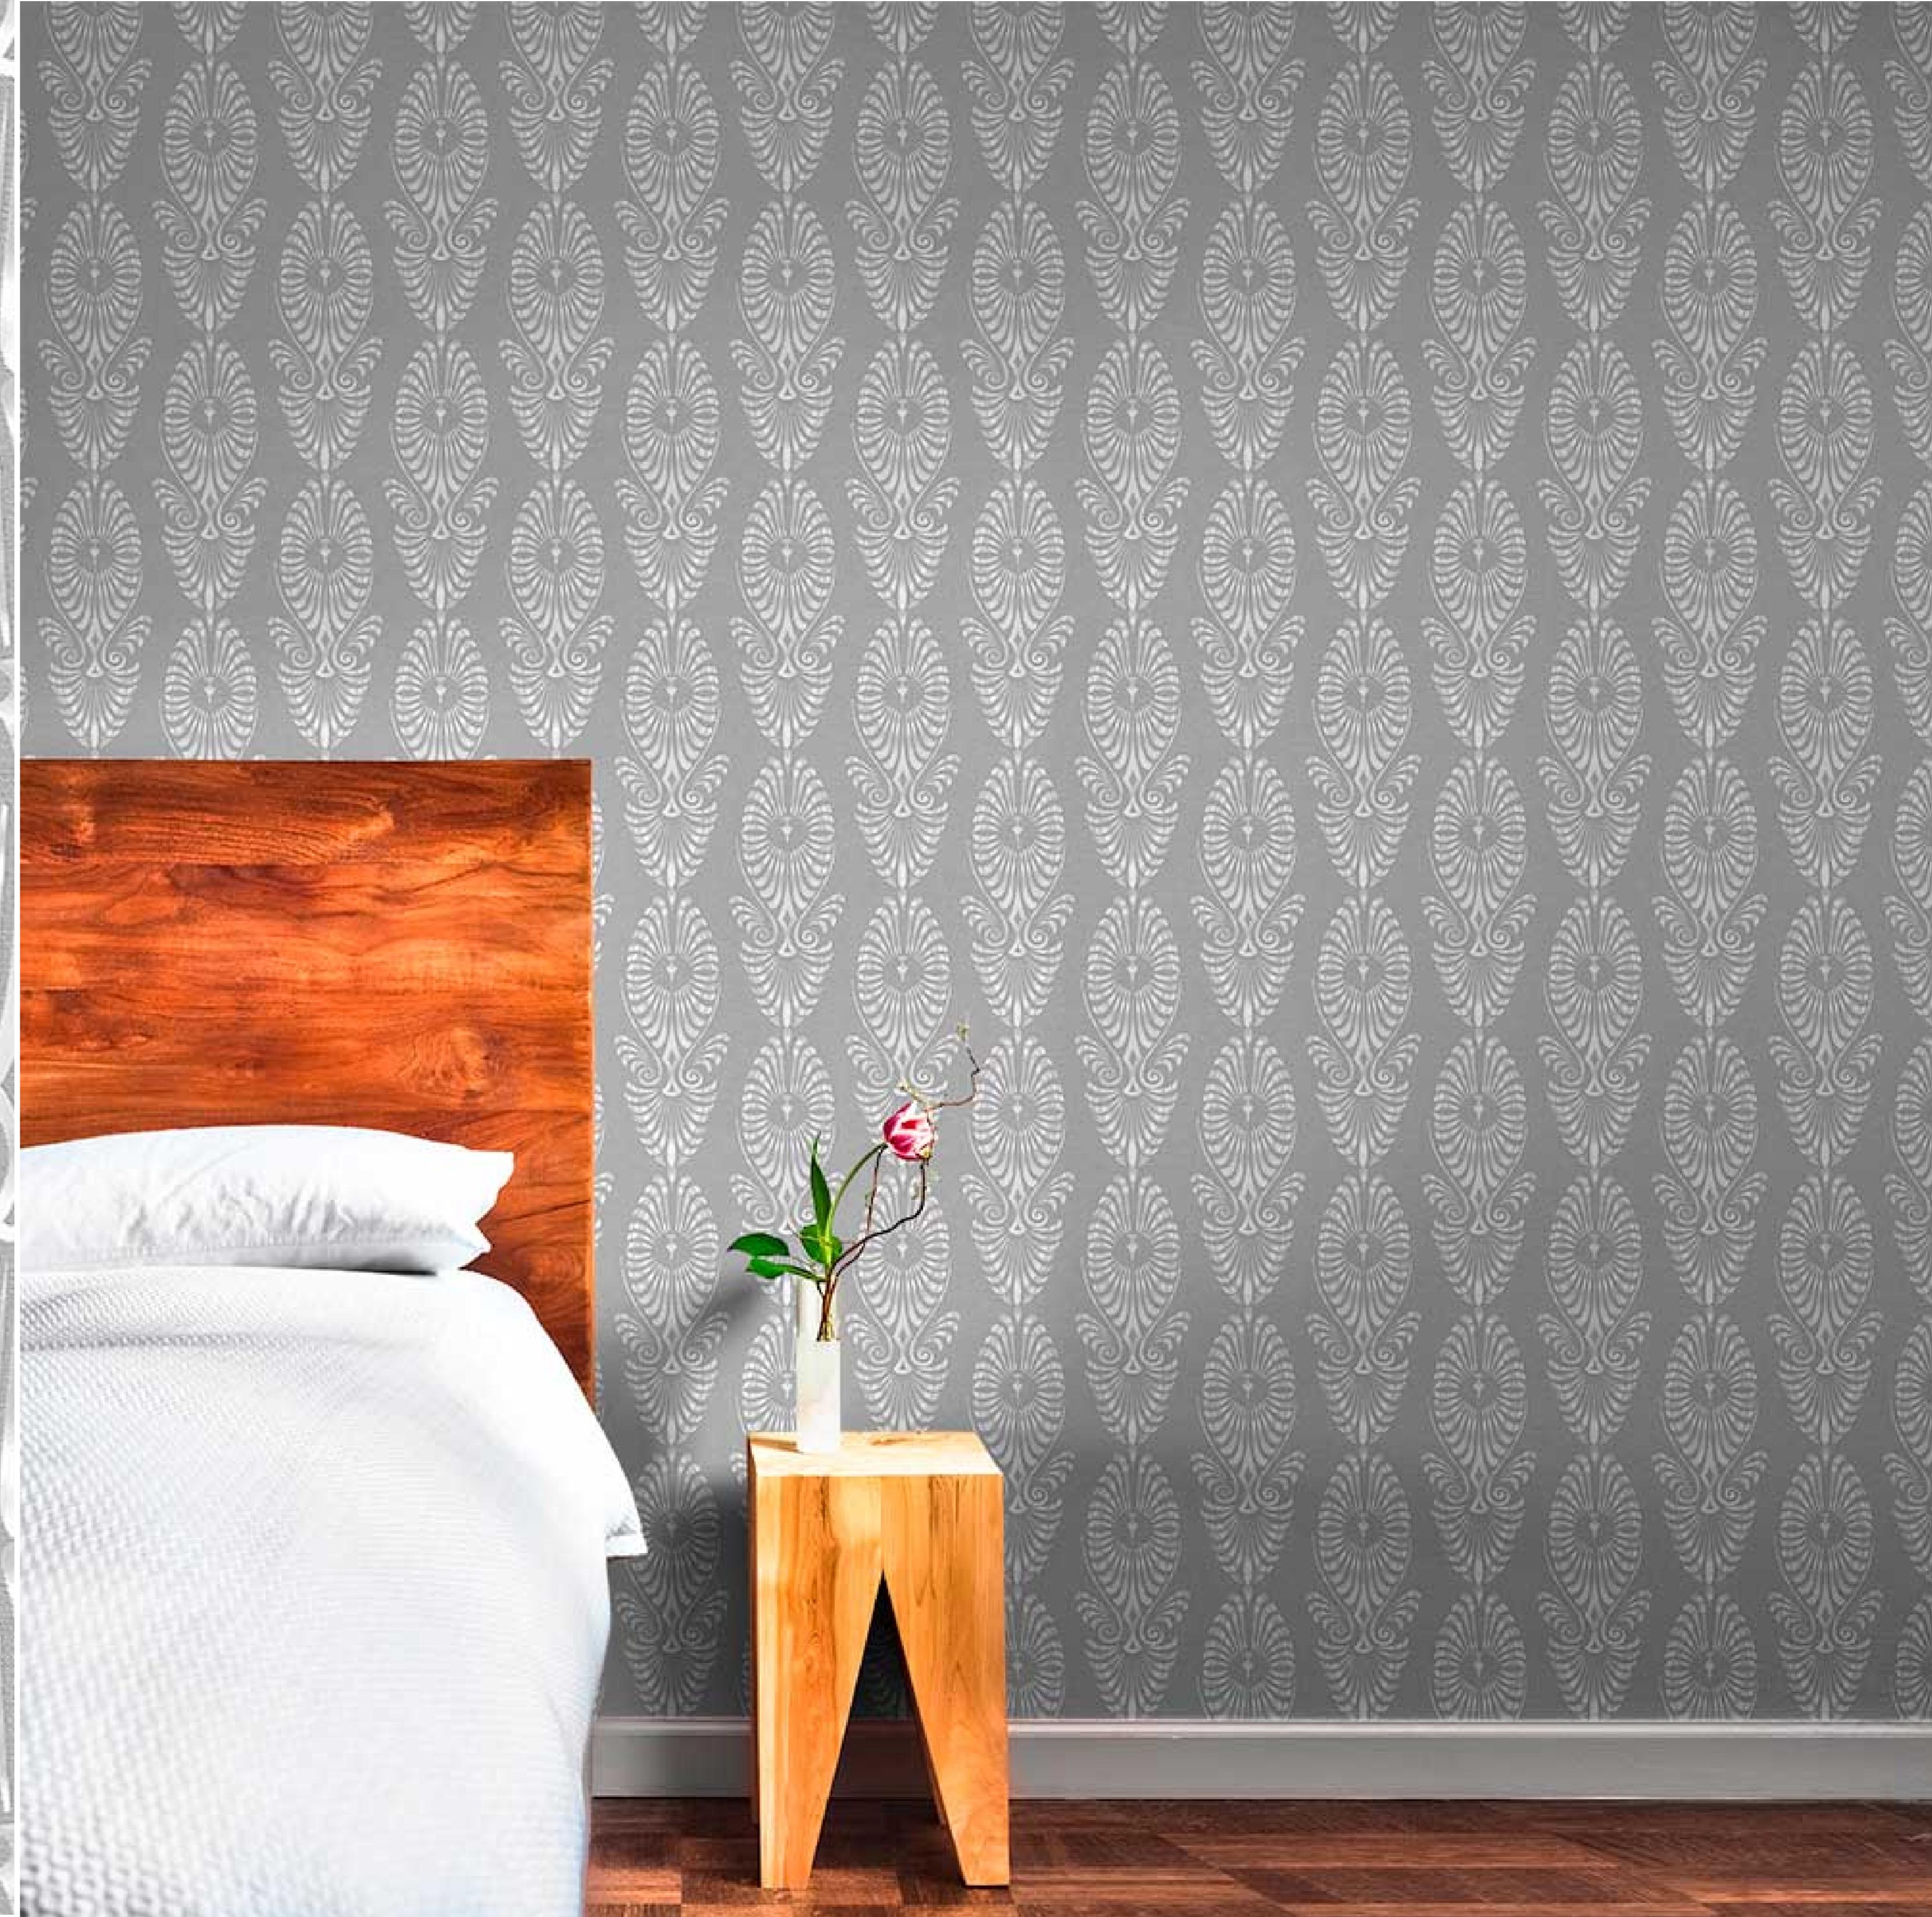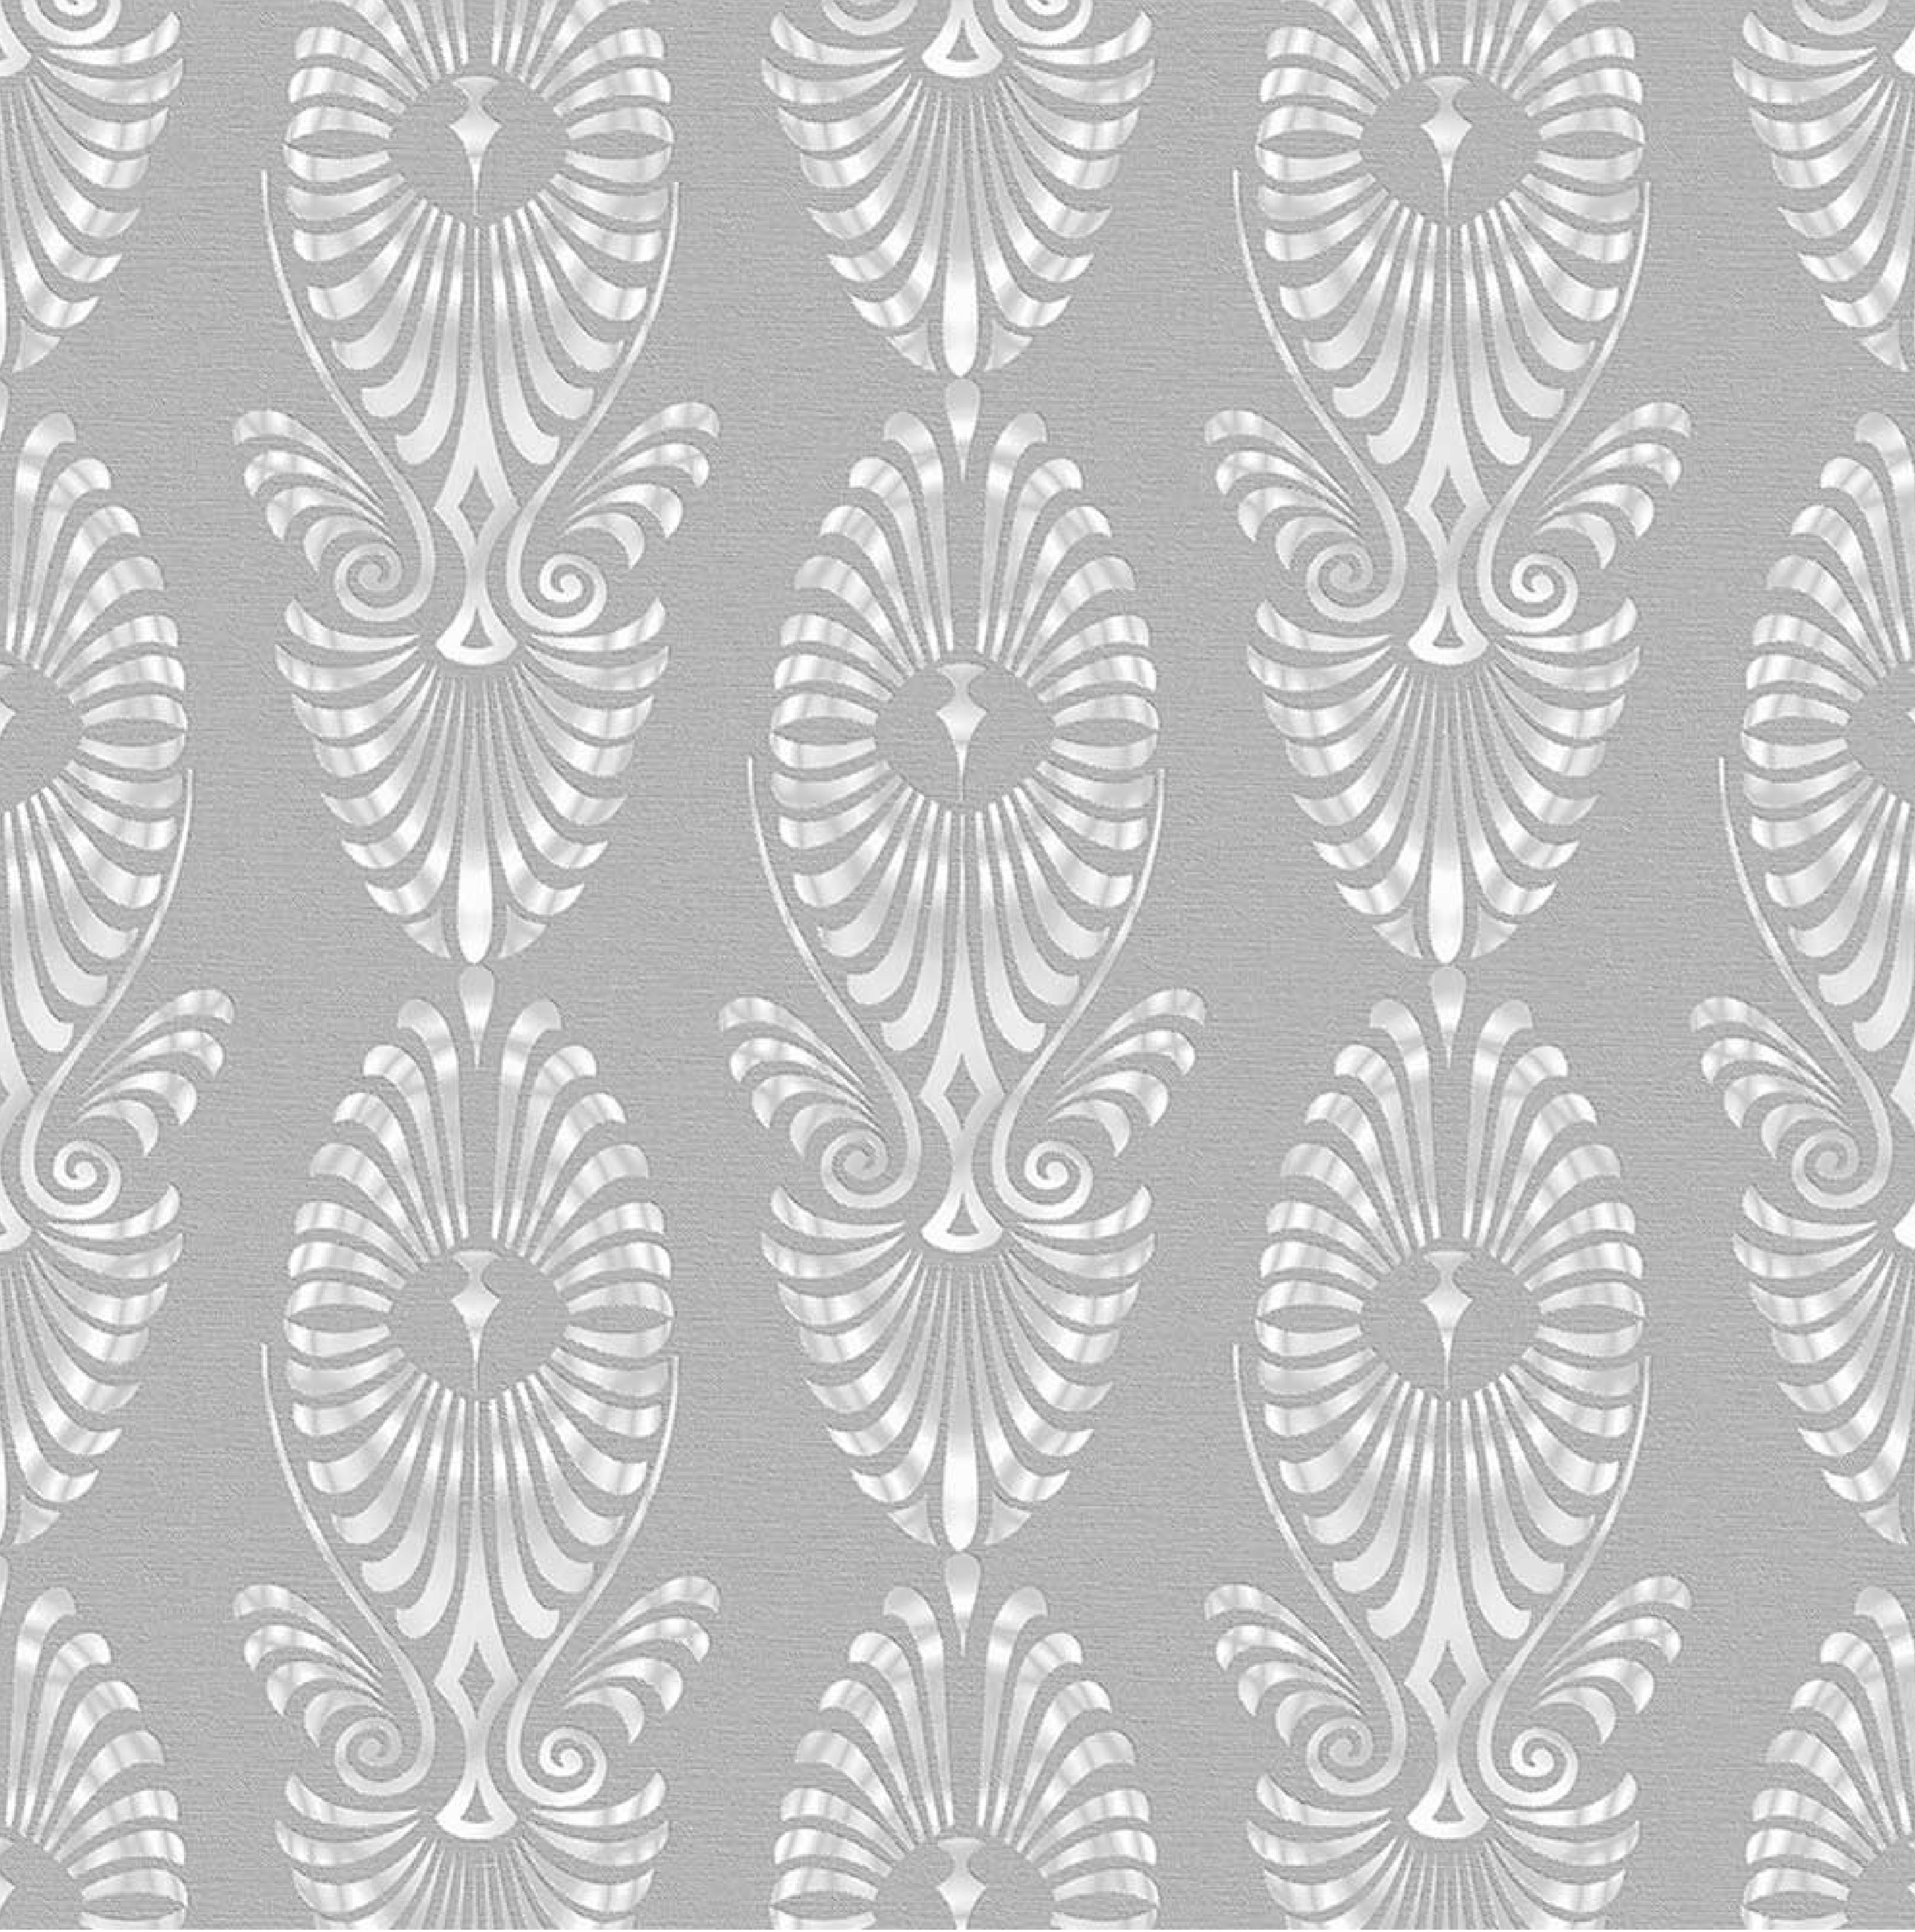

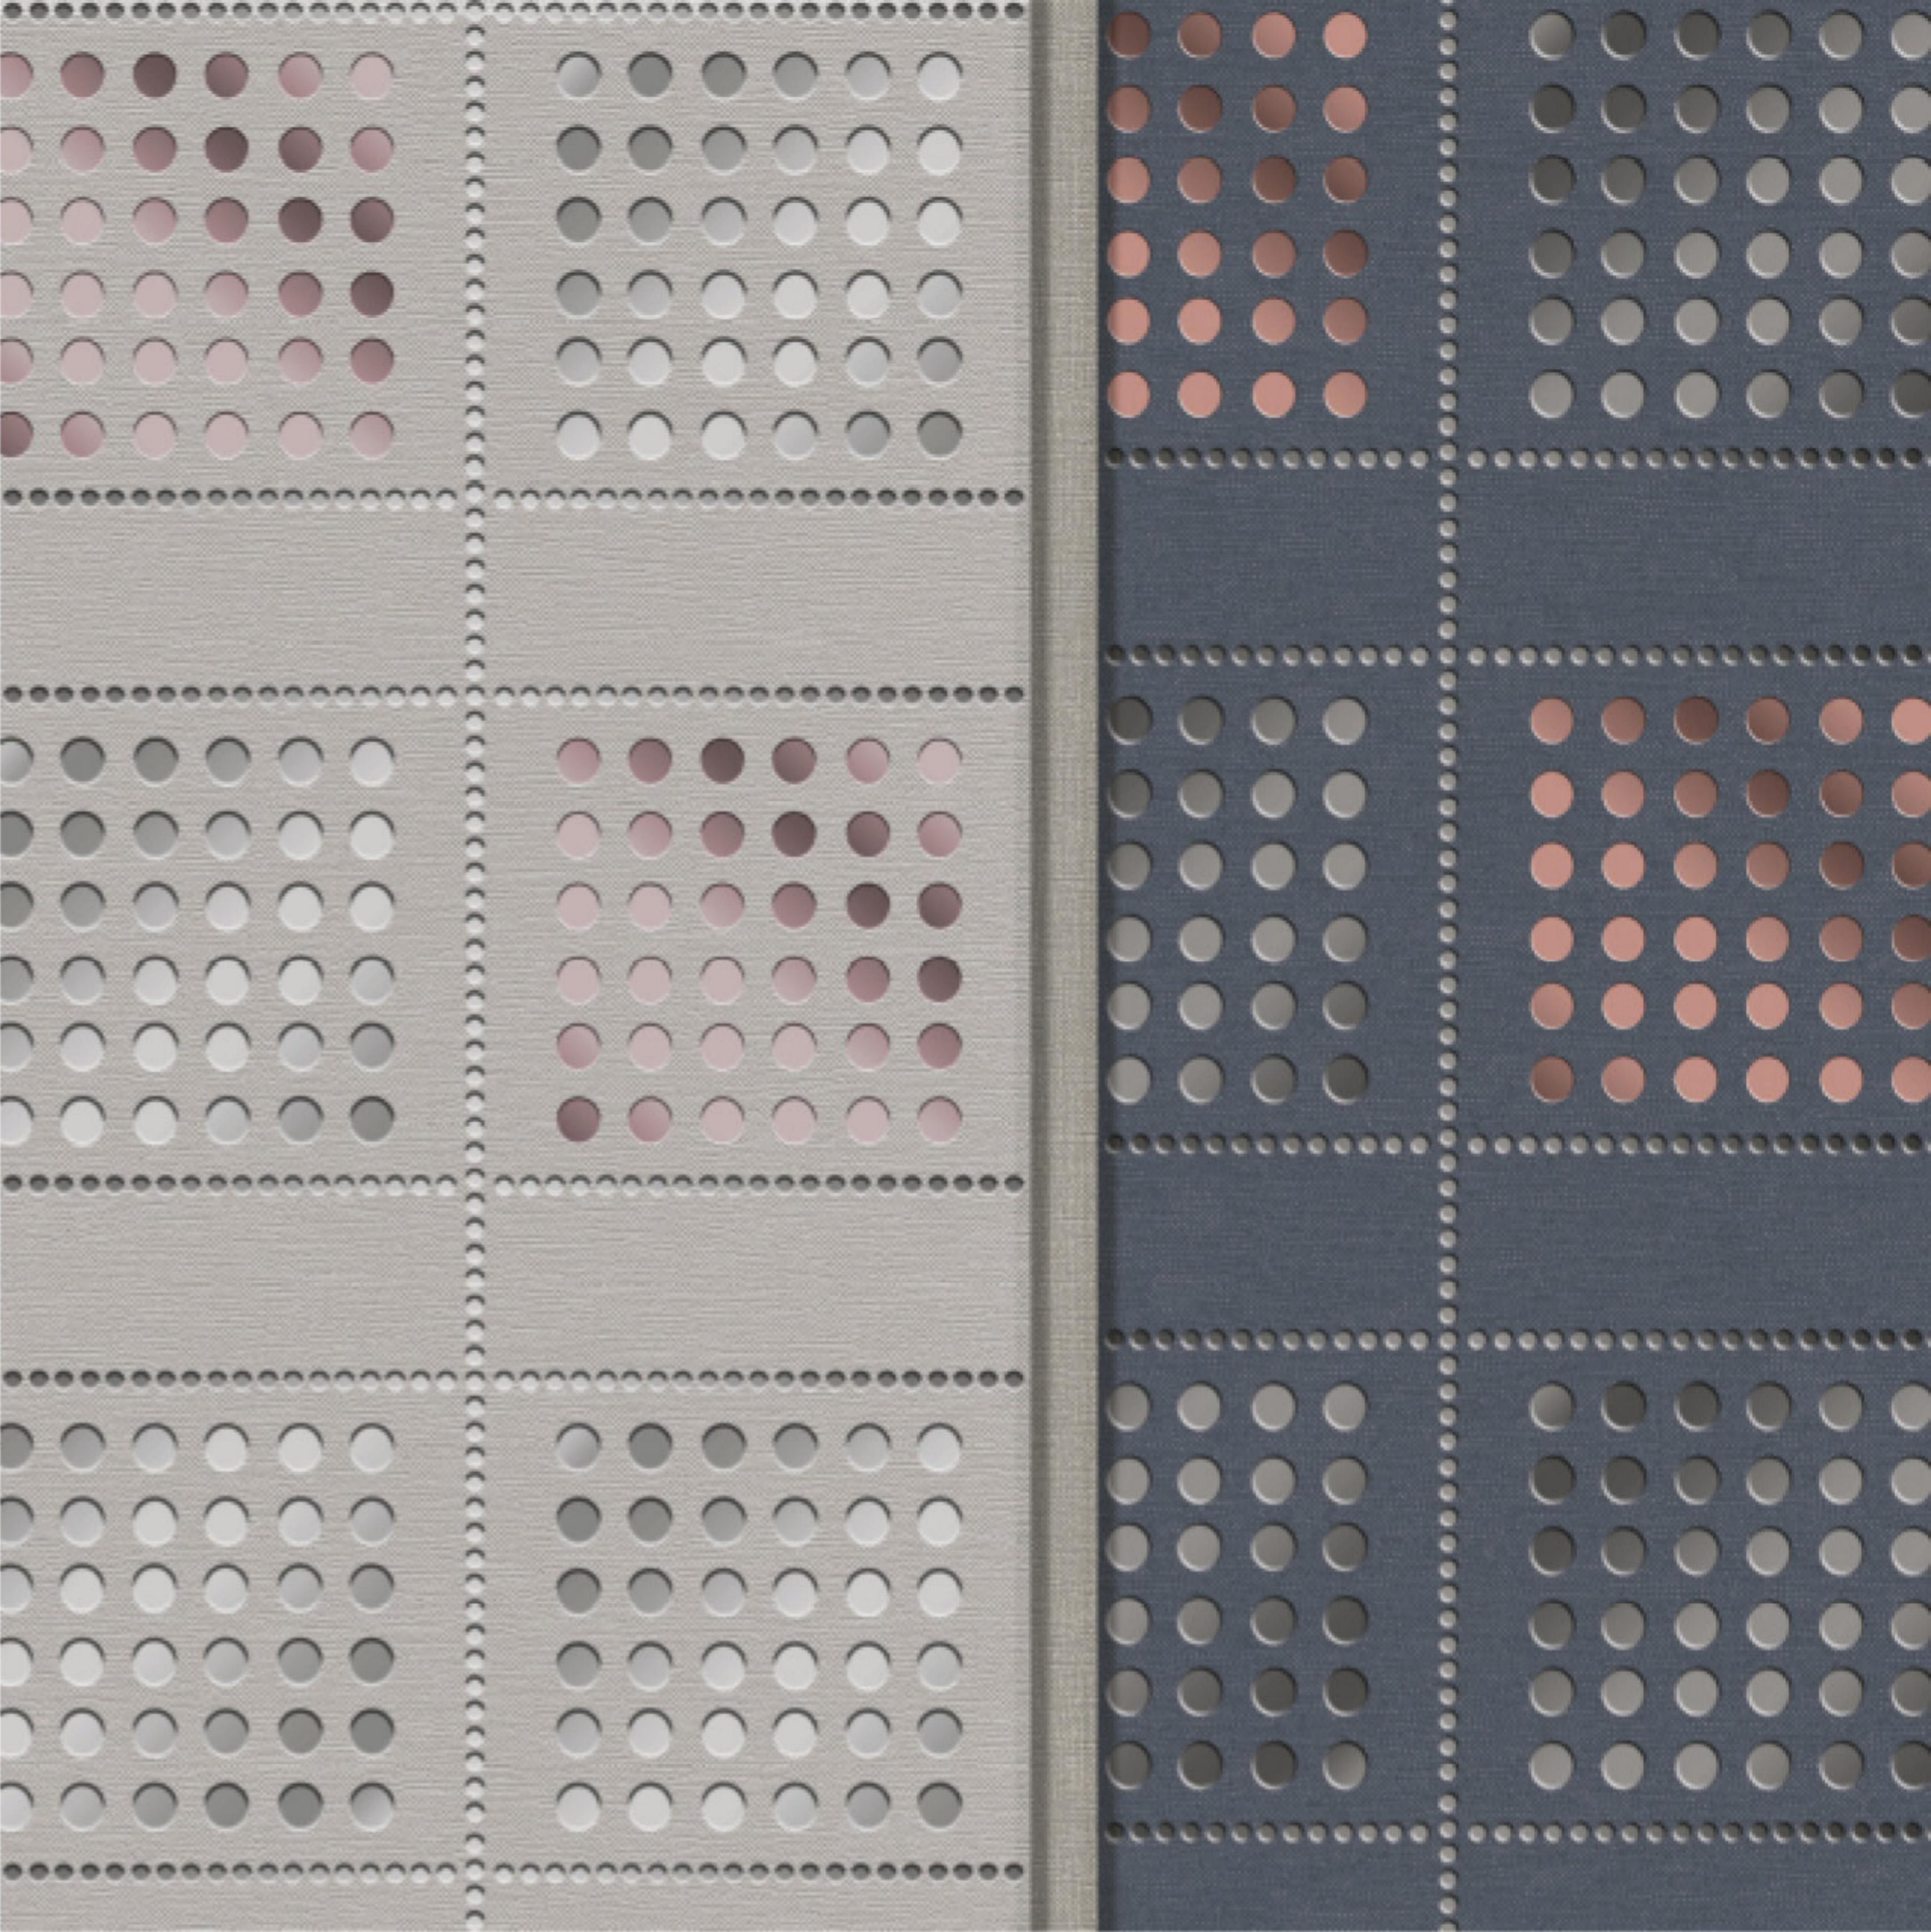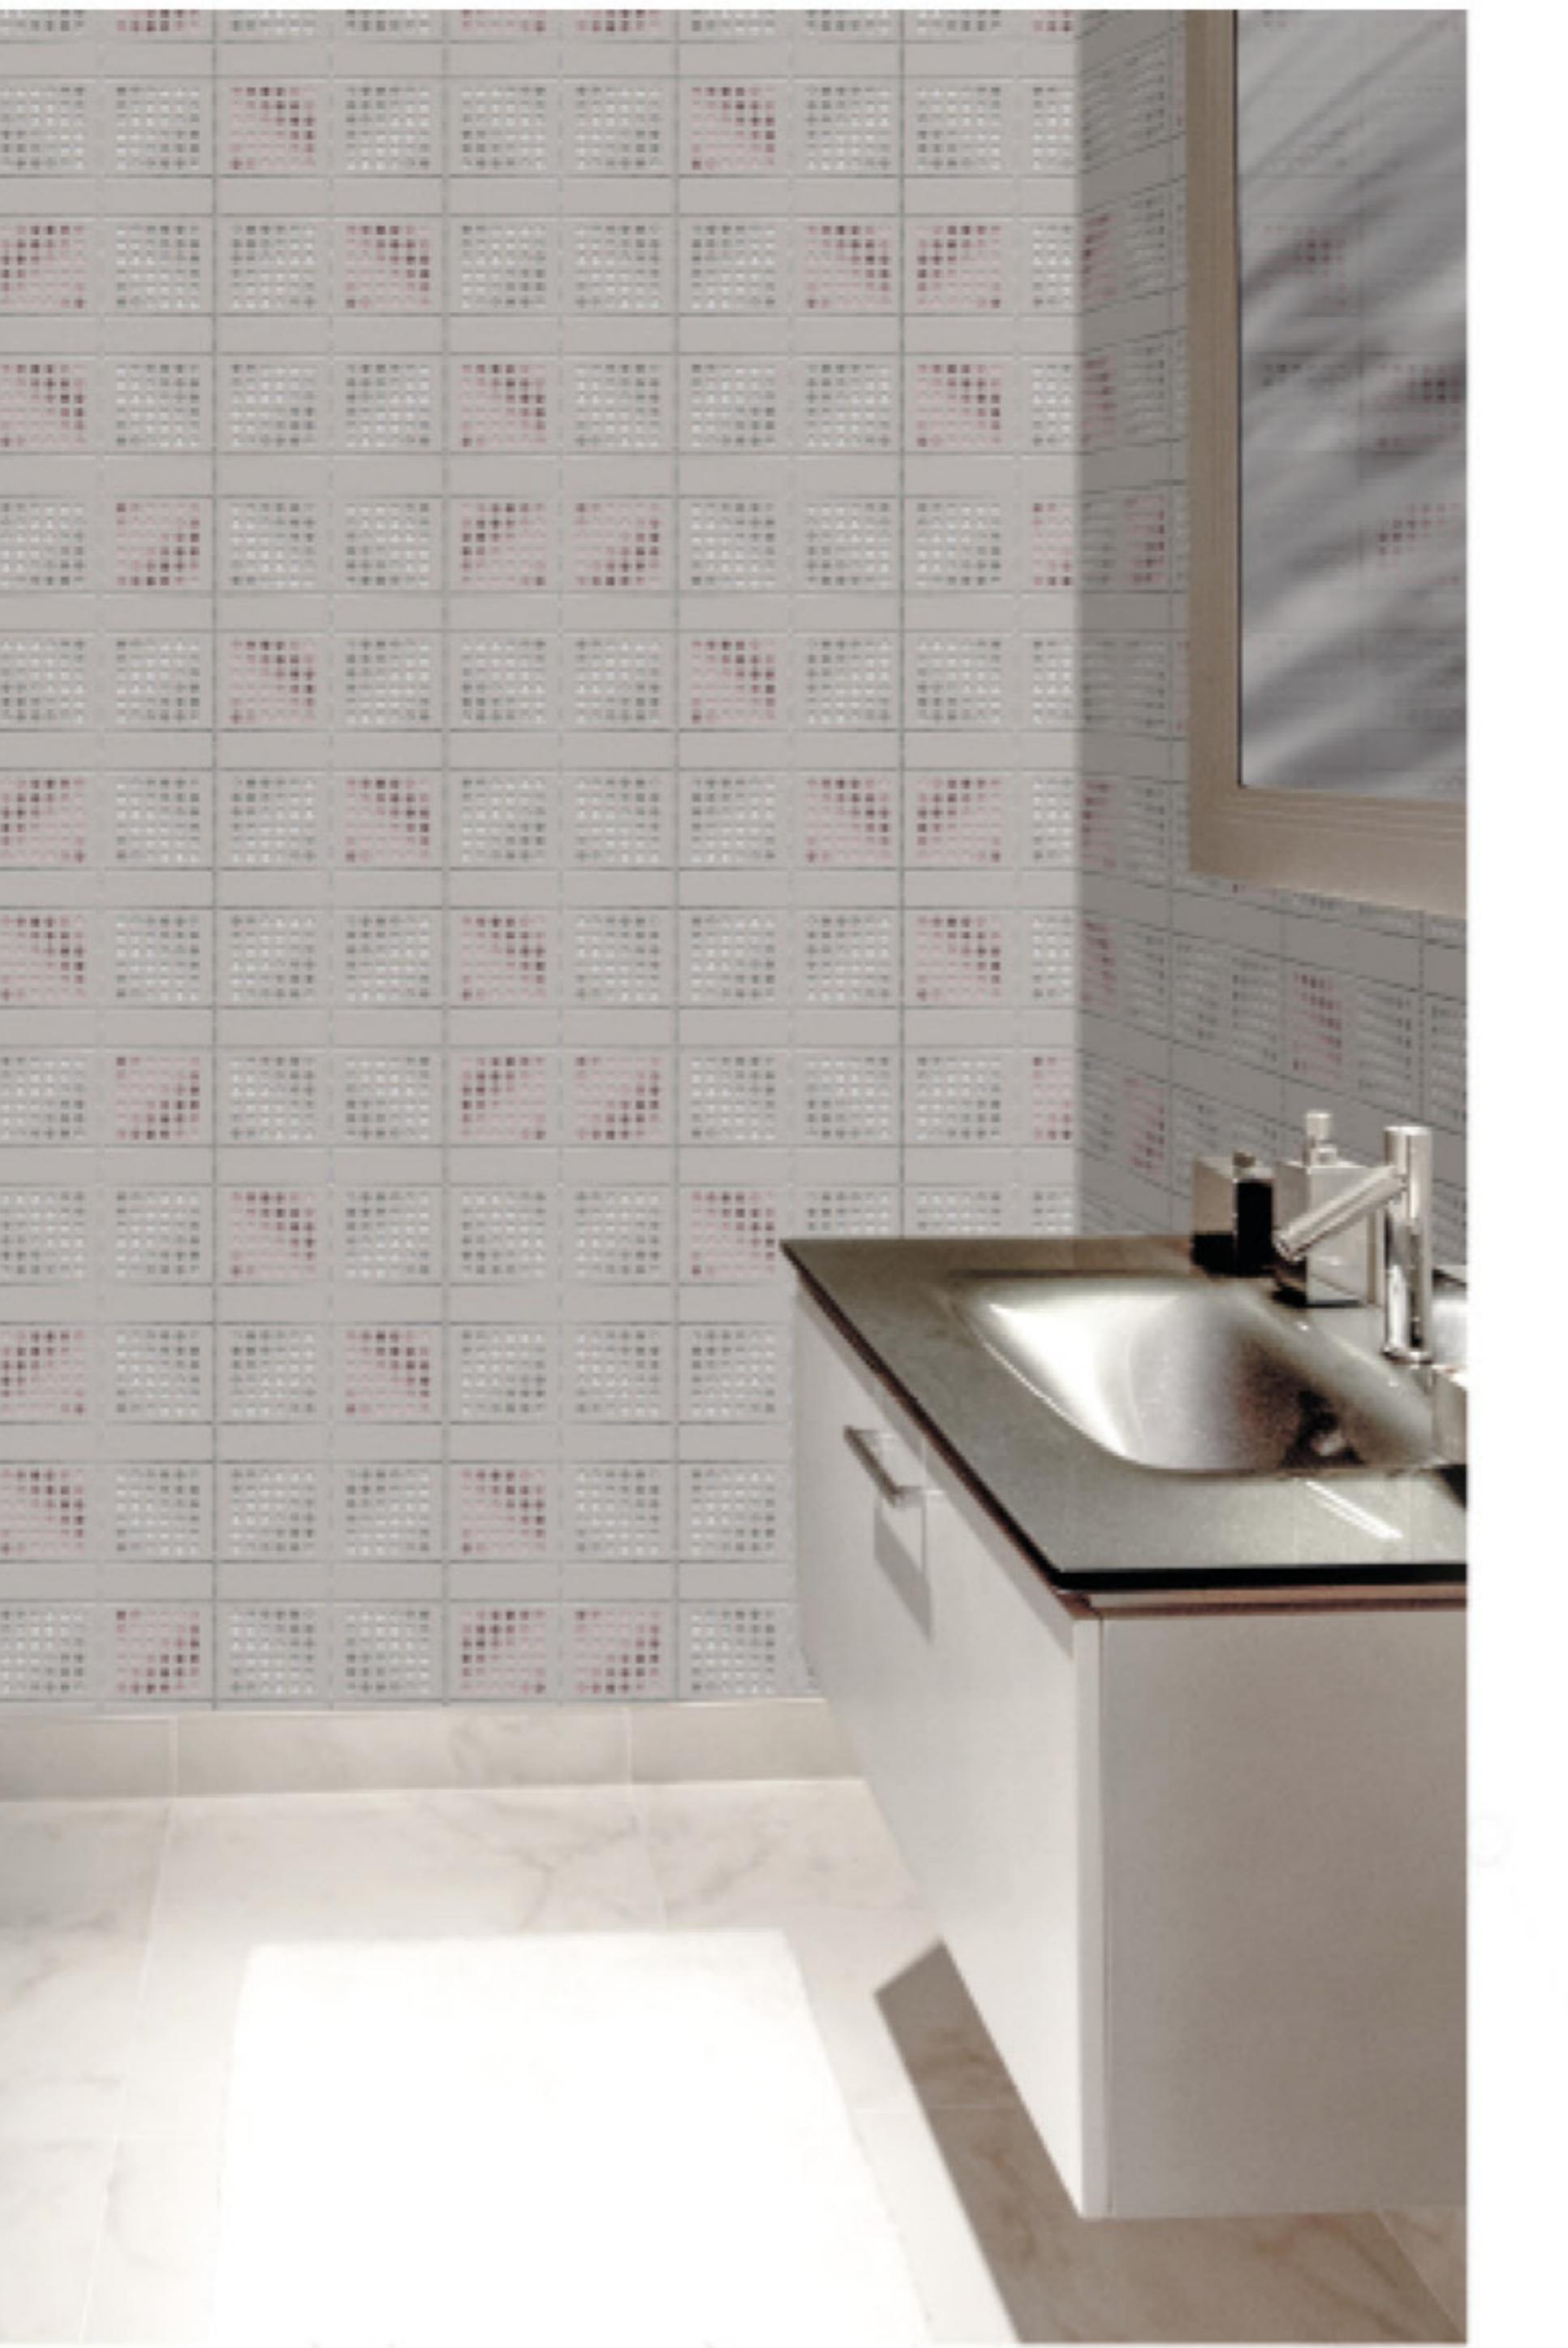

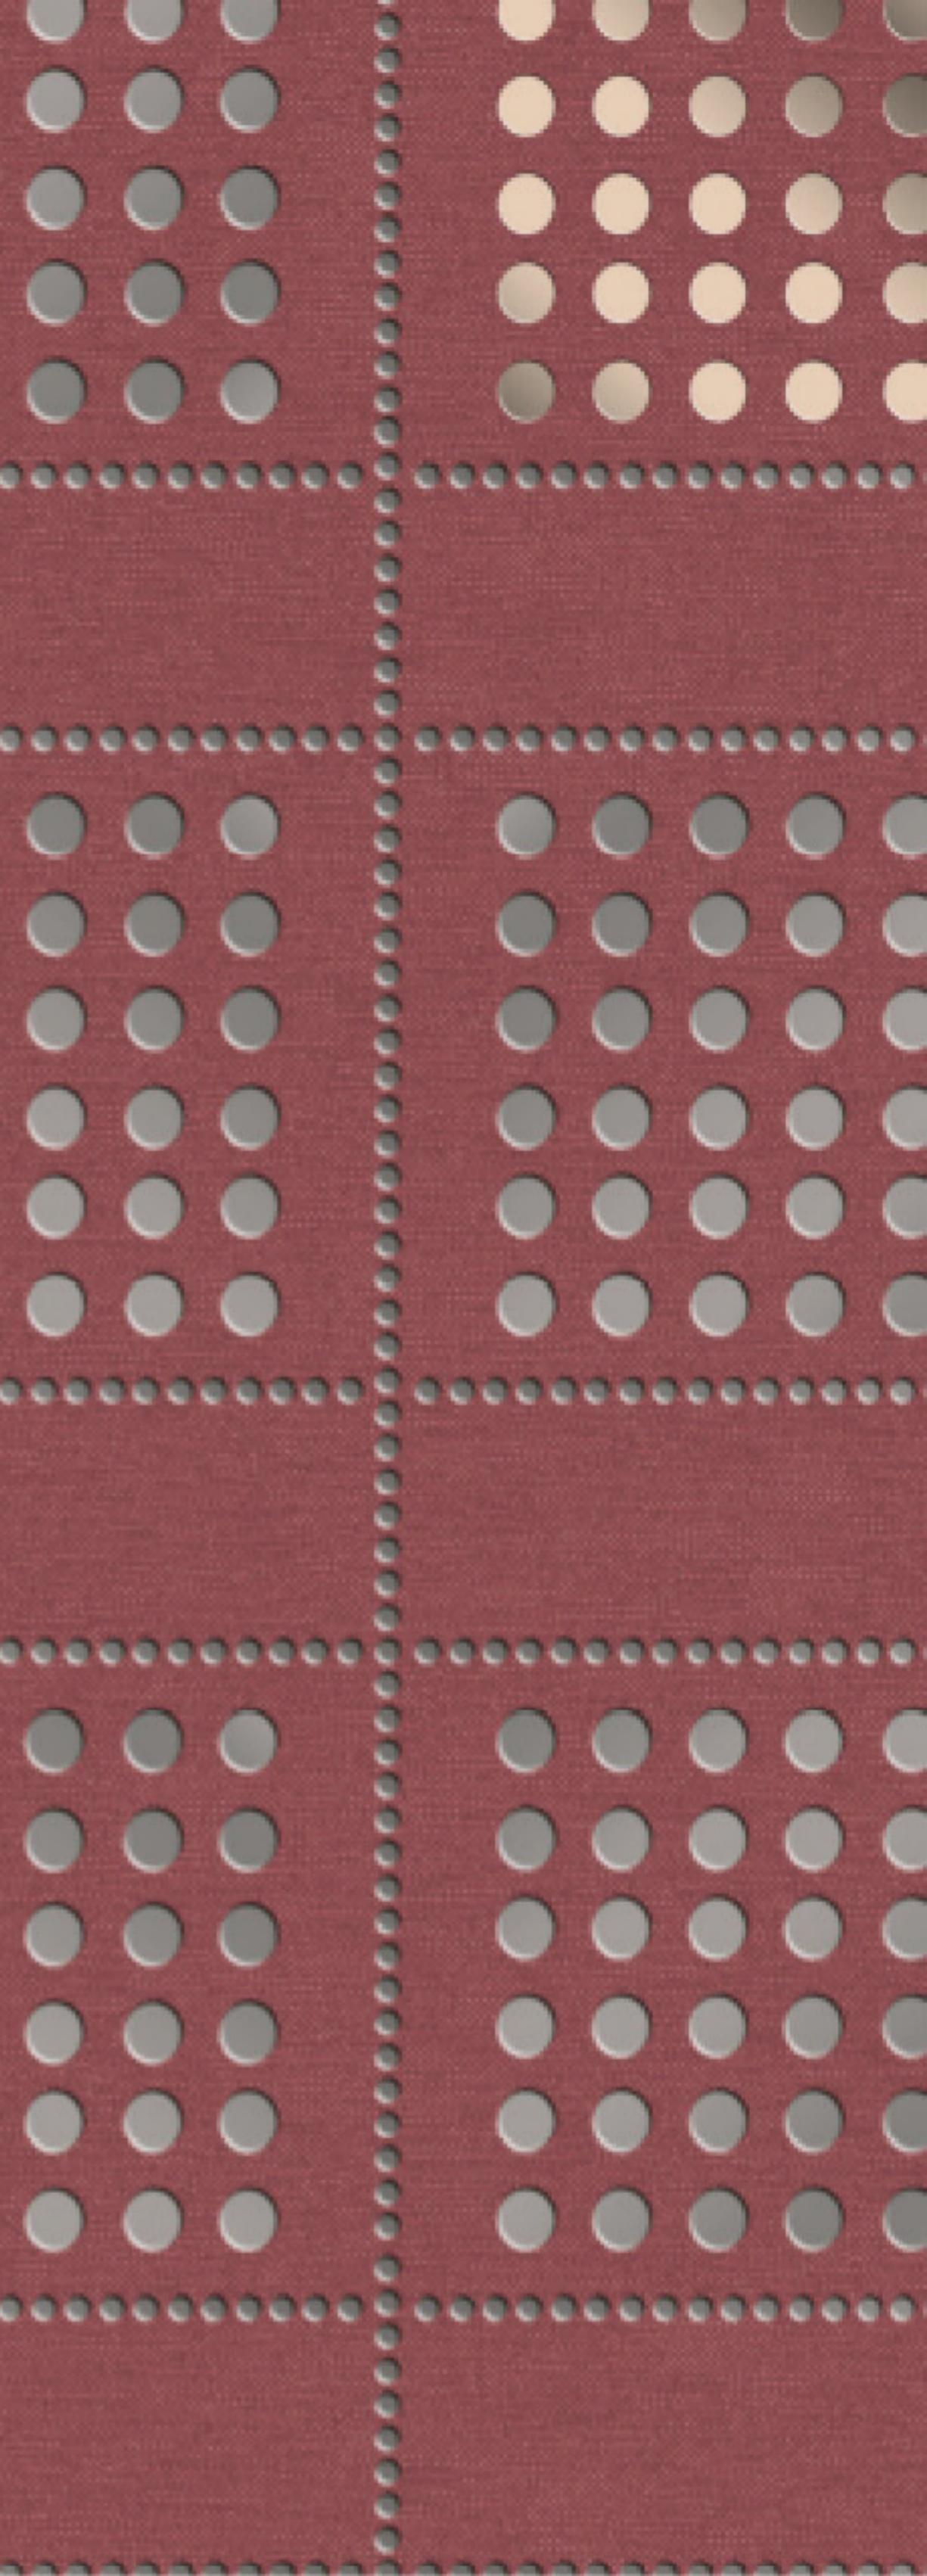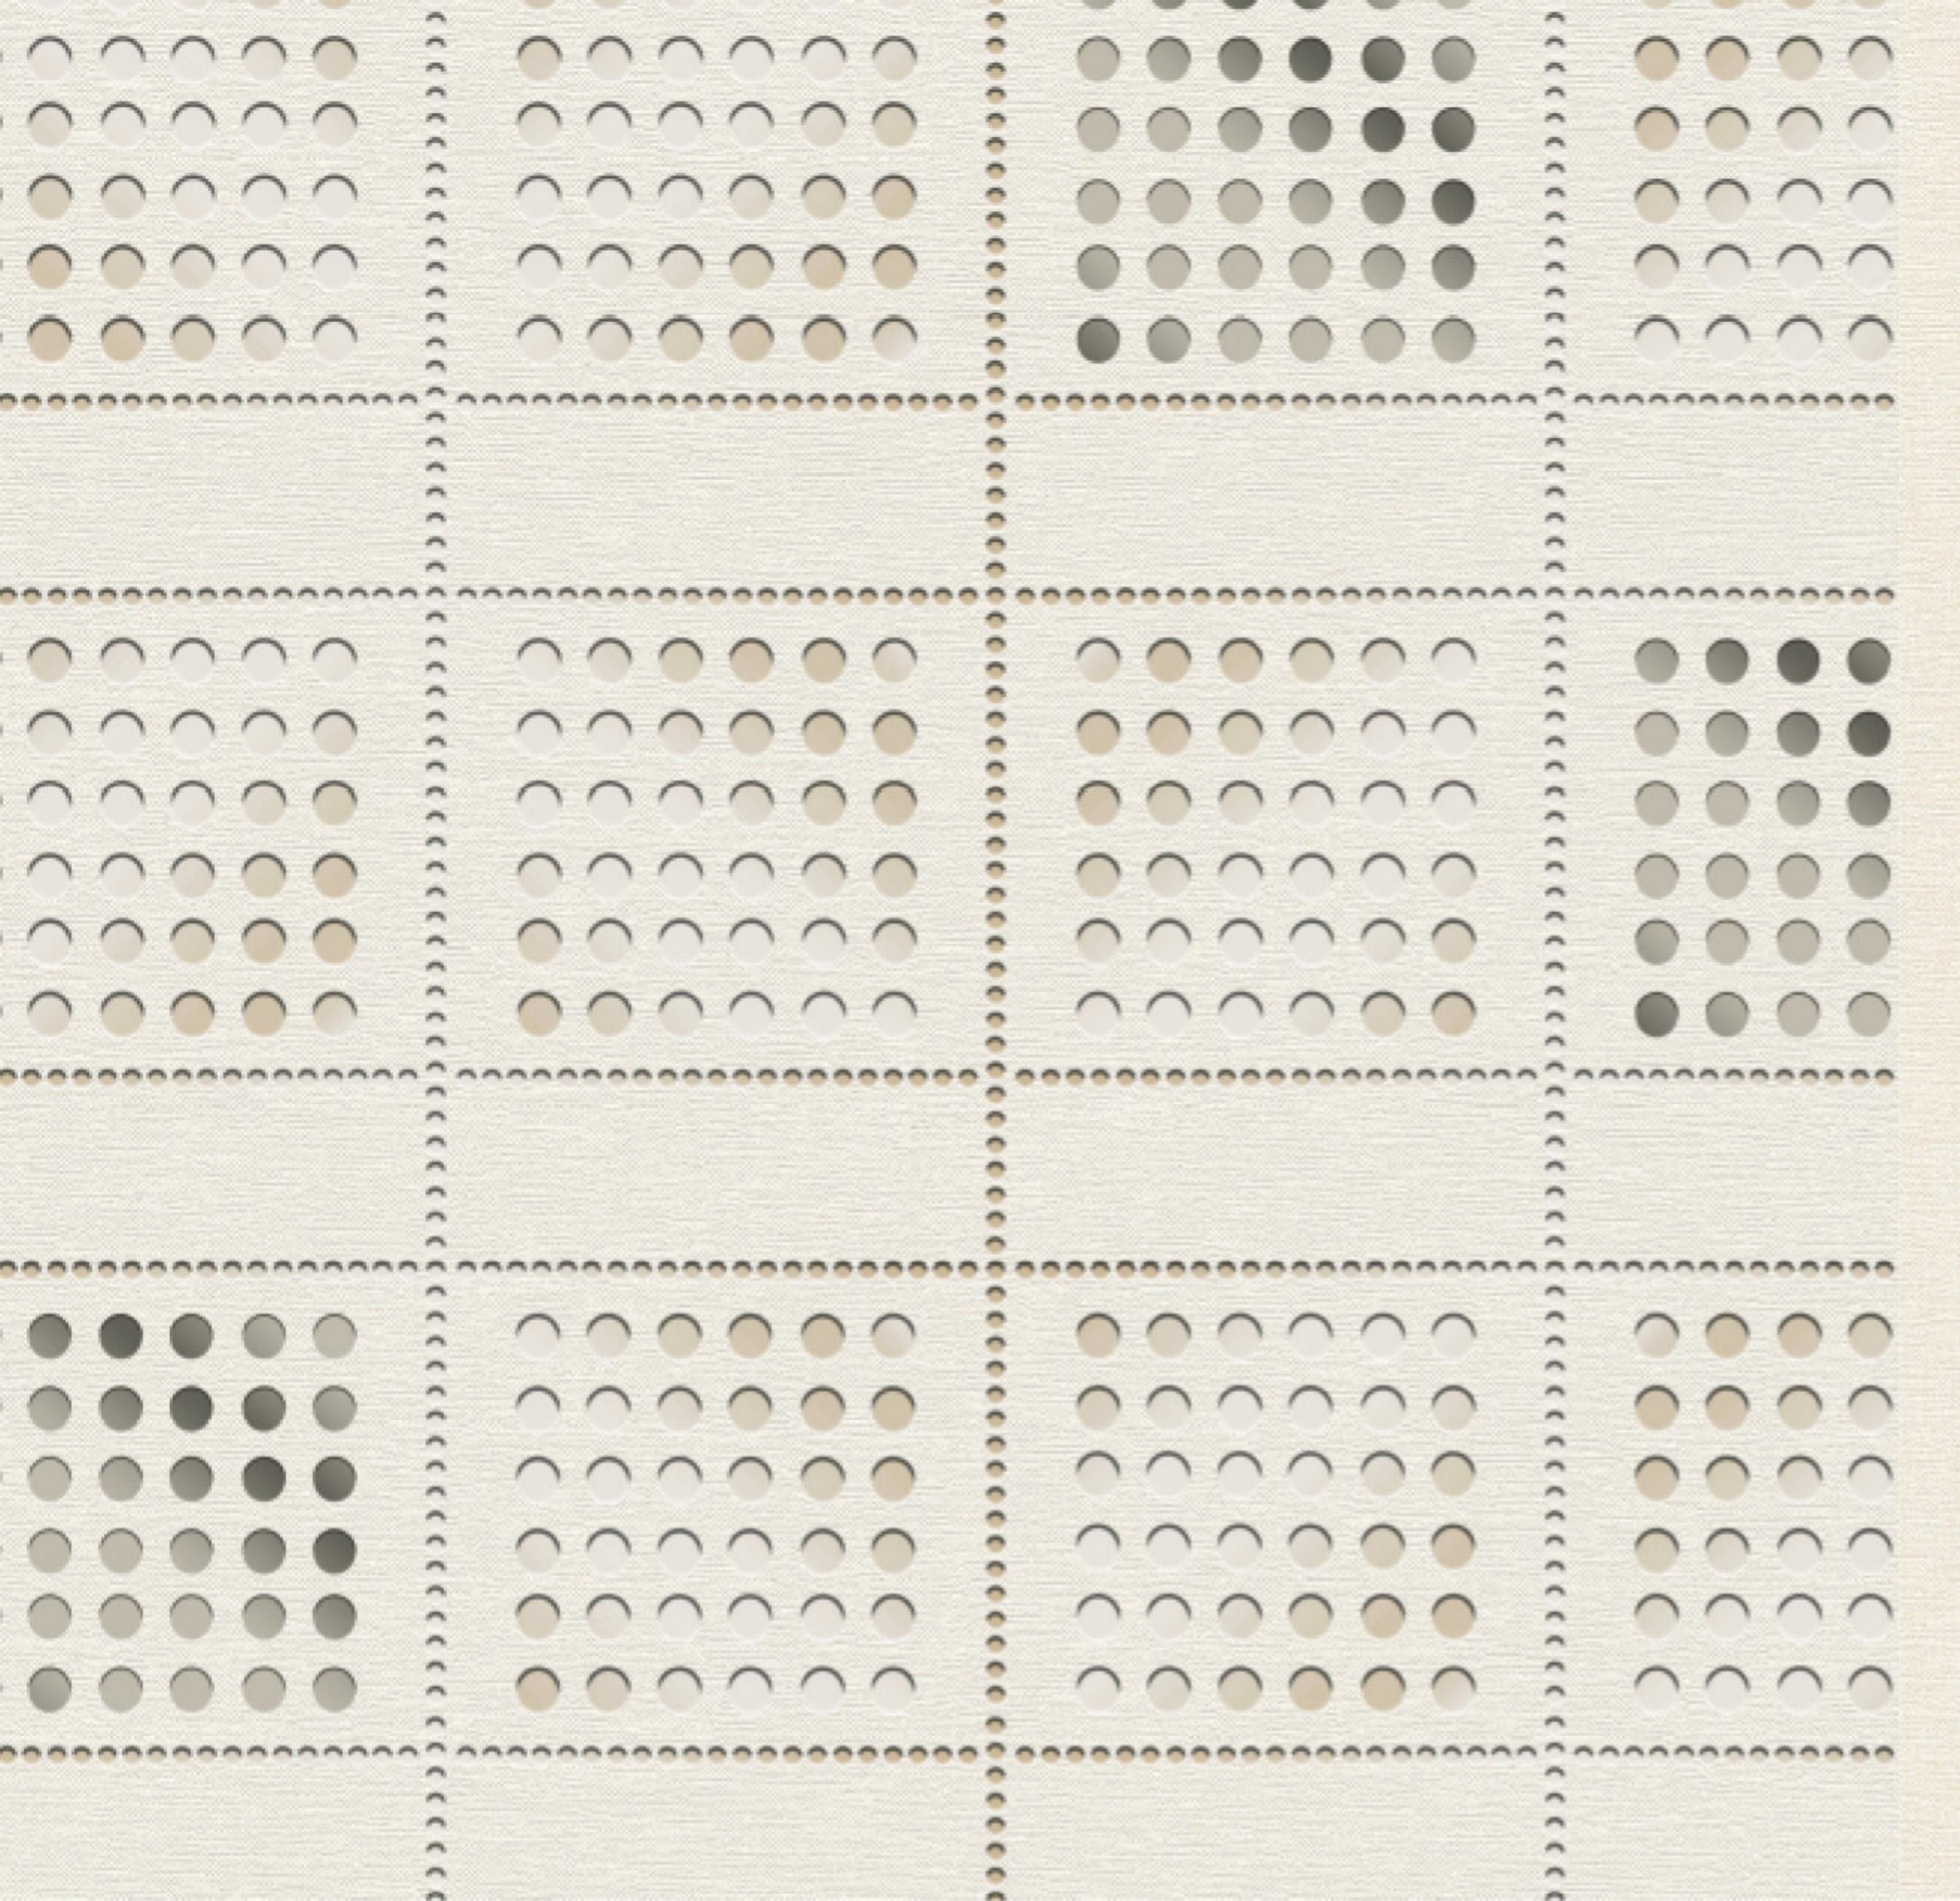

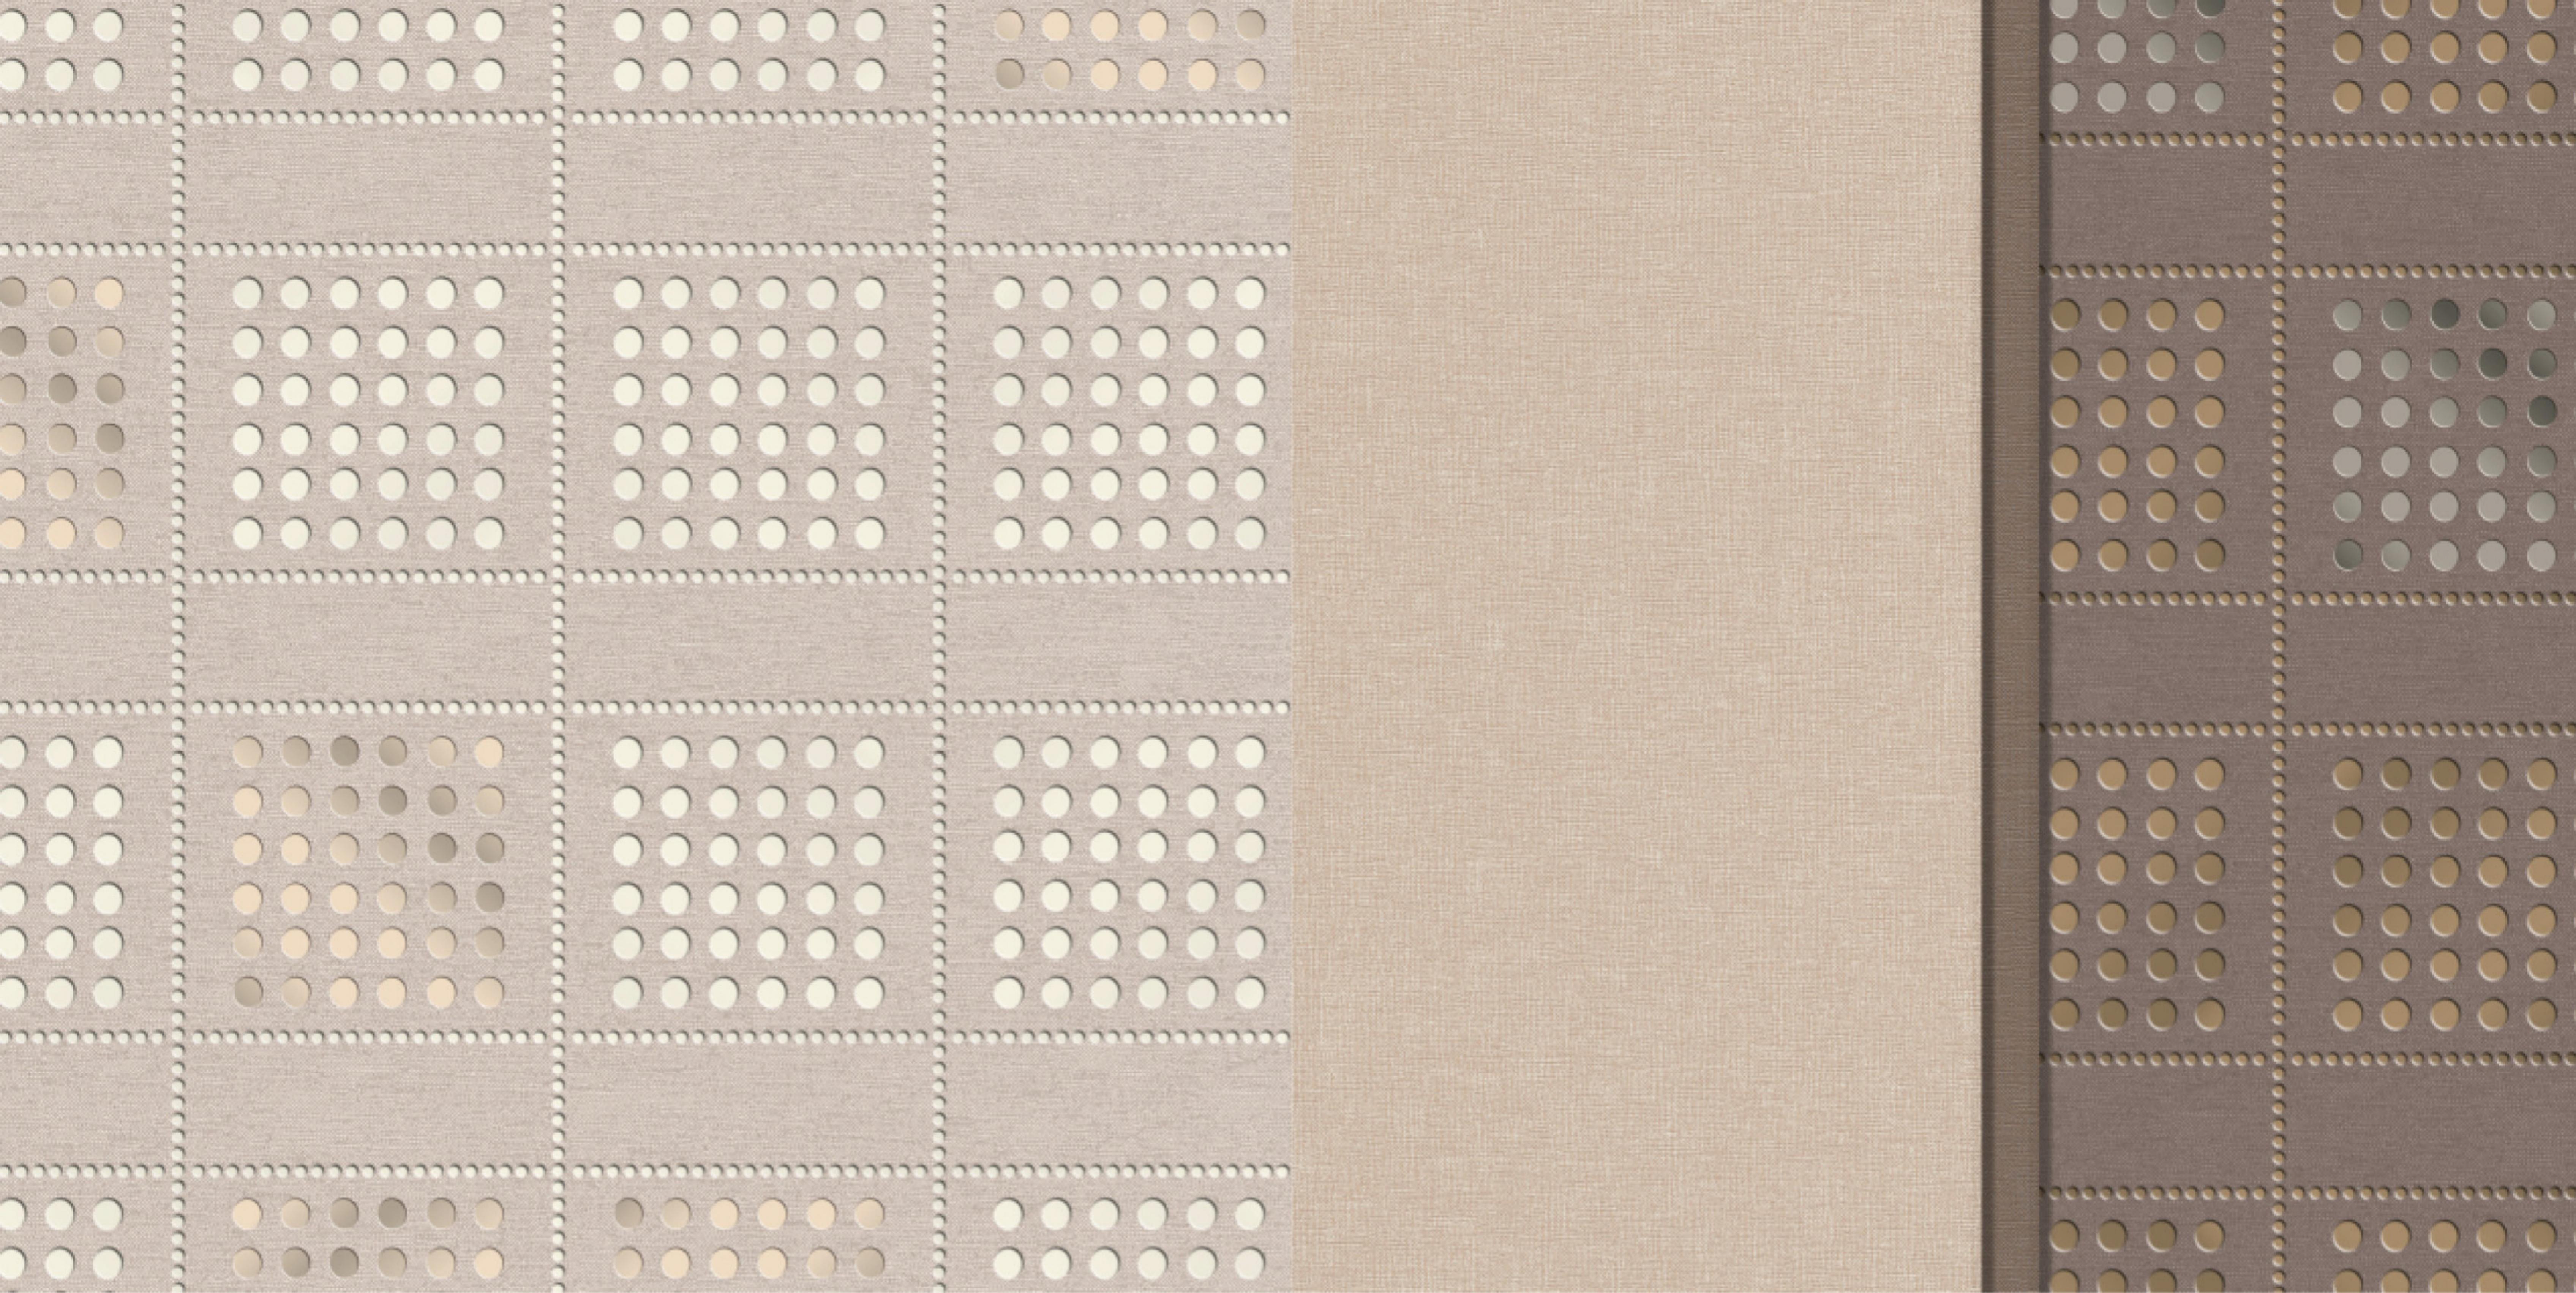

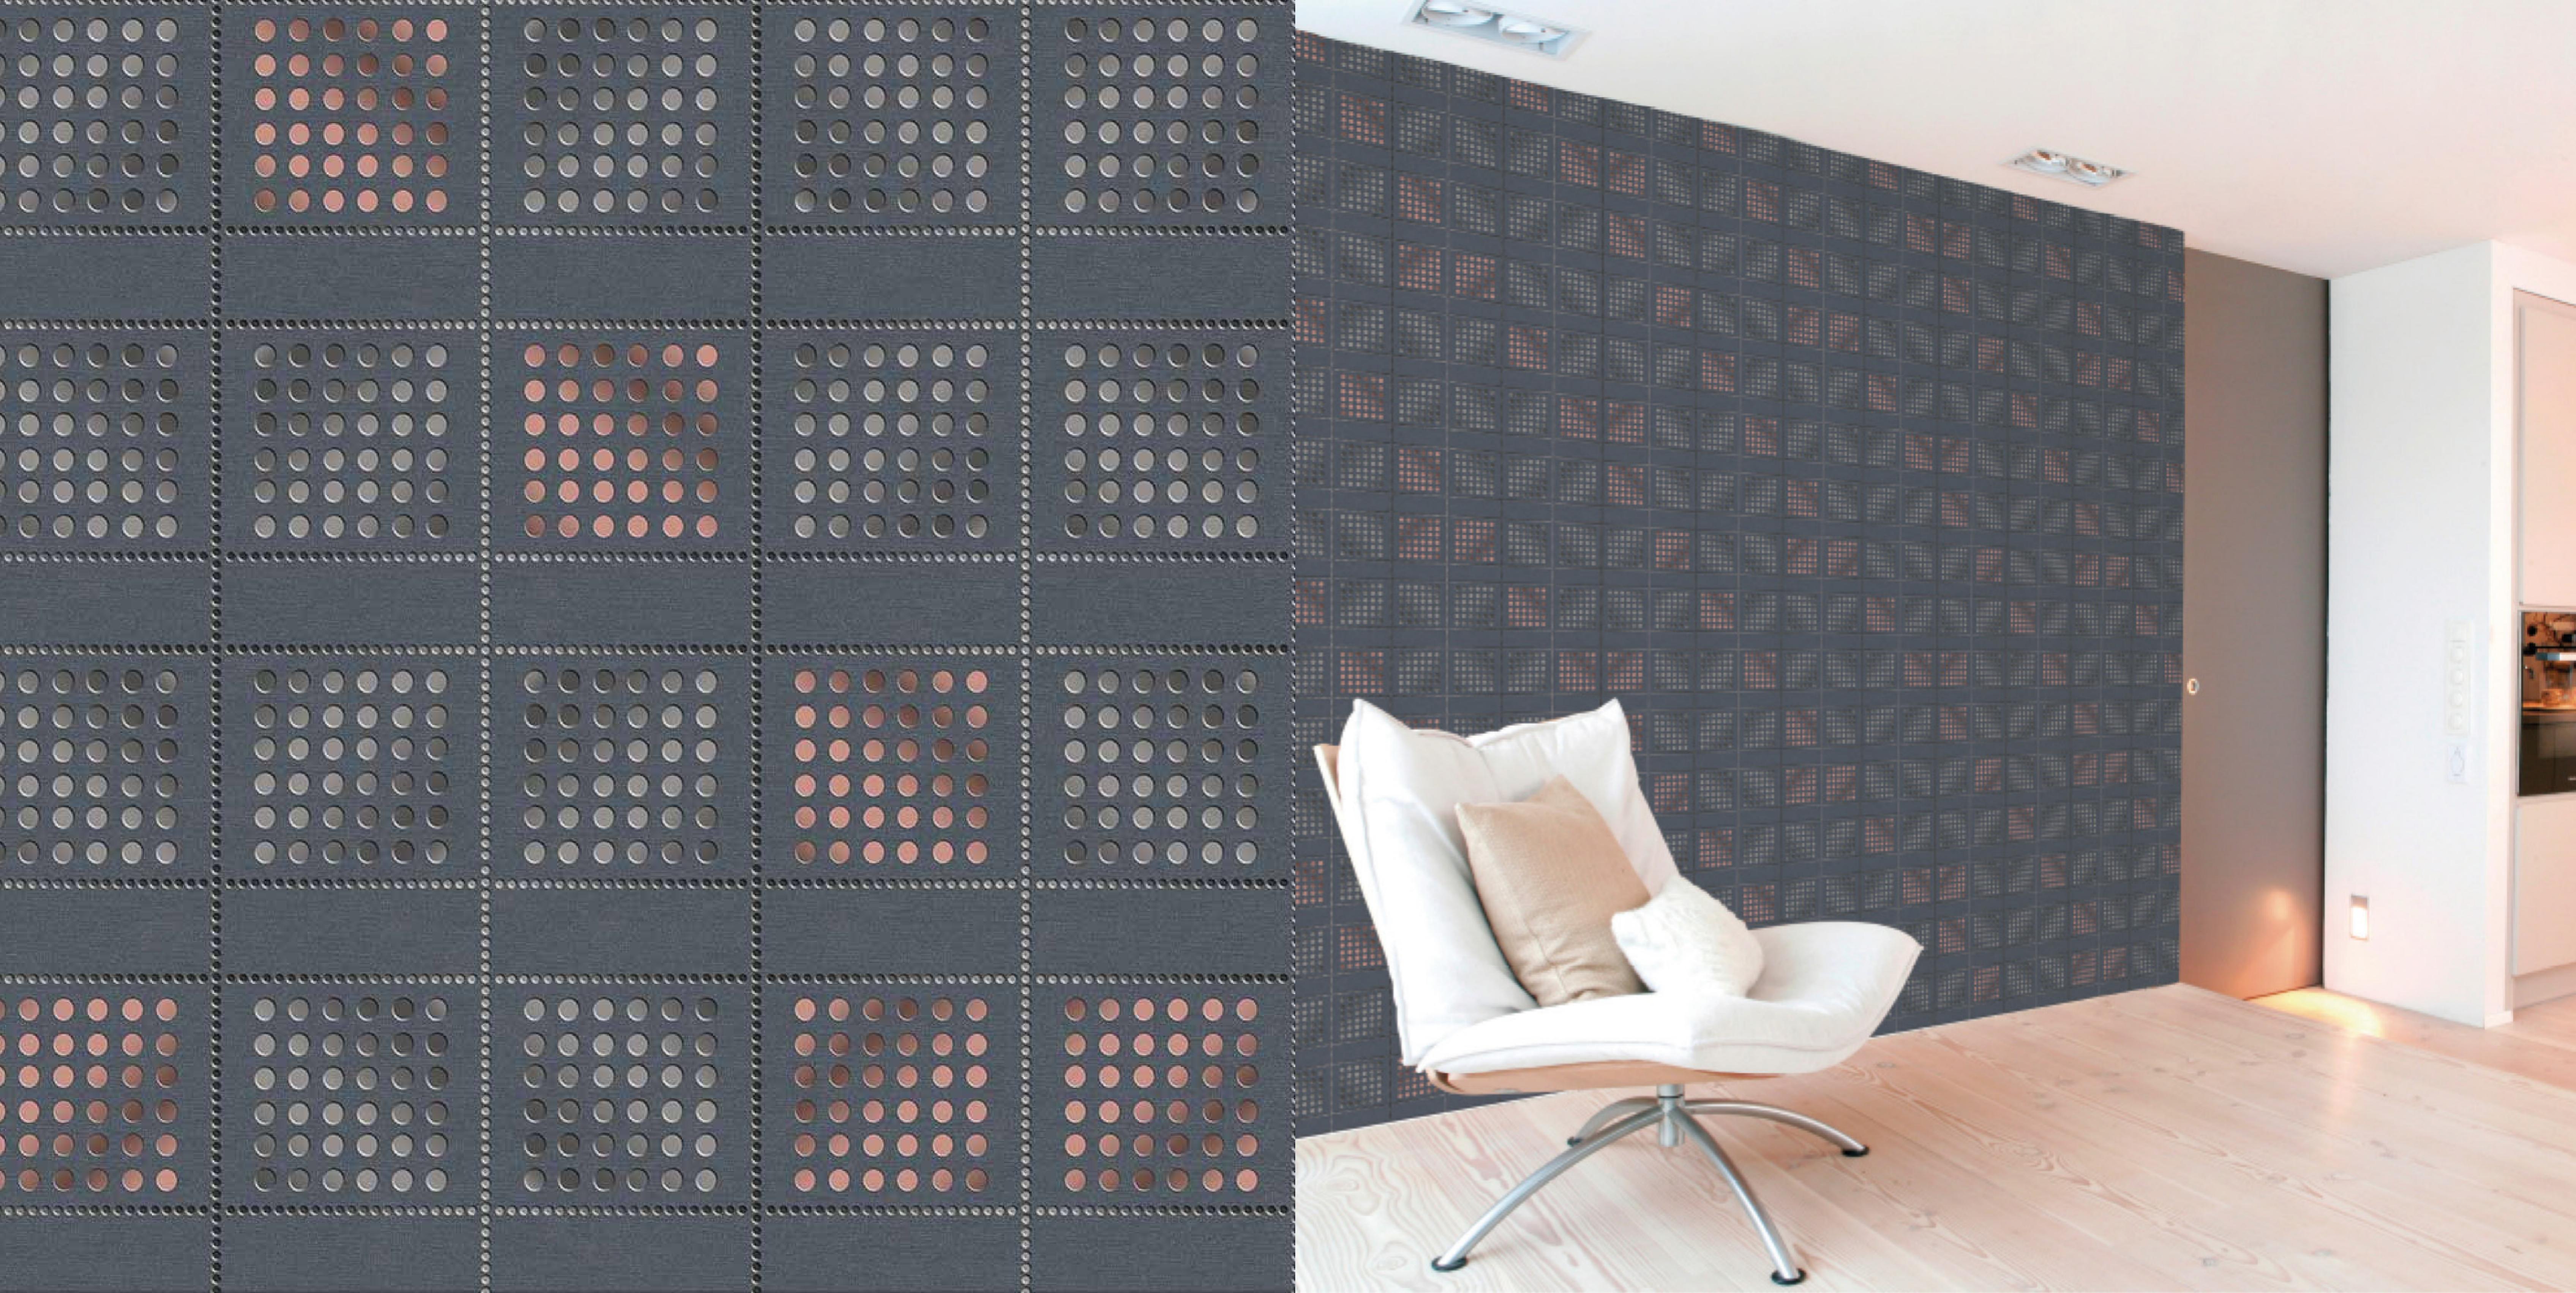




Iris








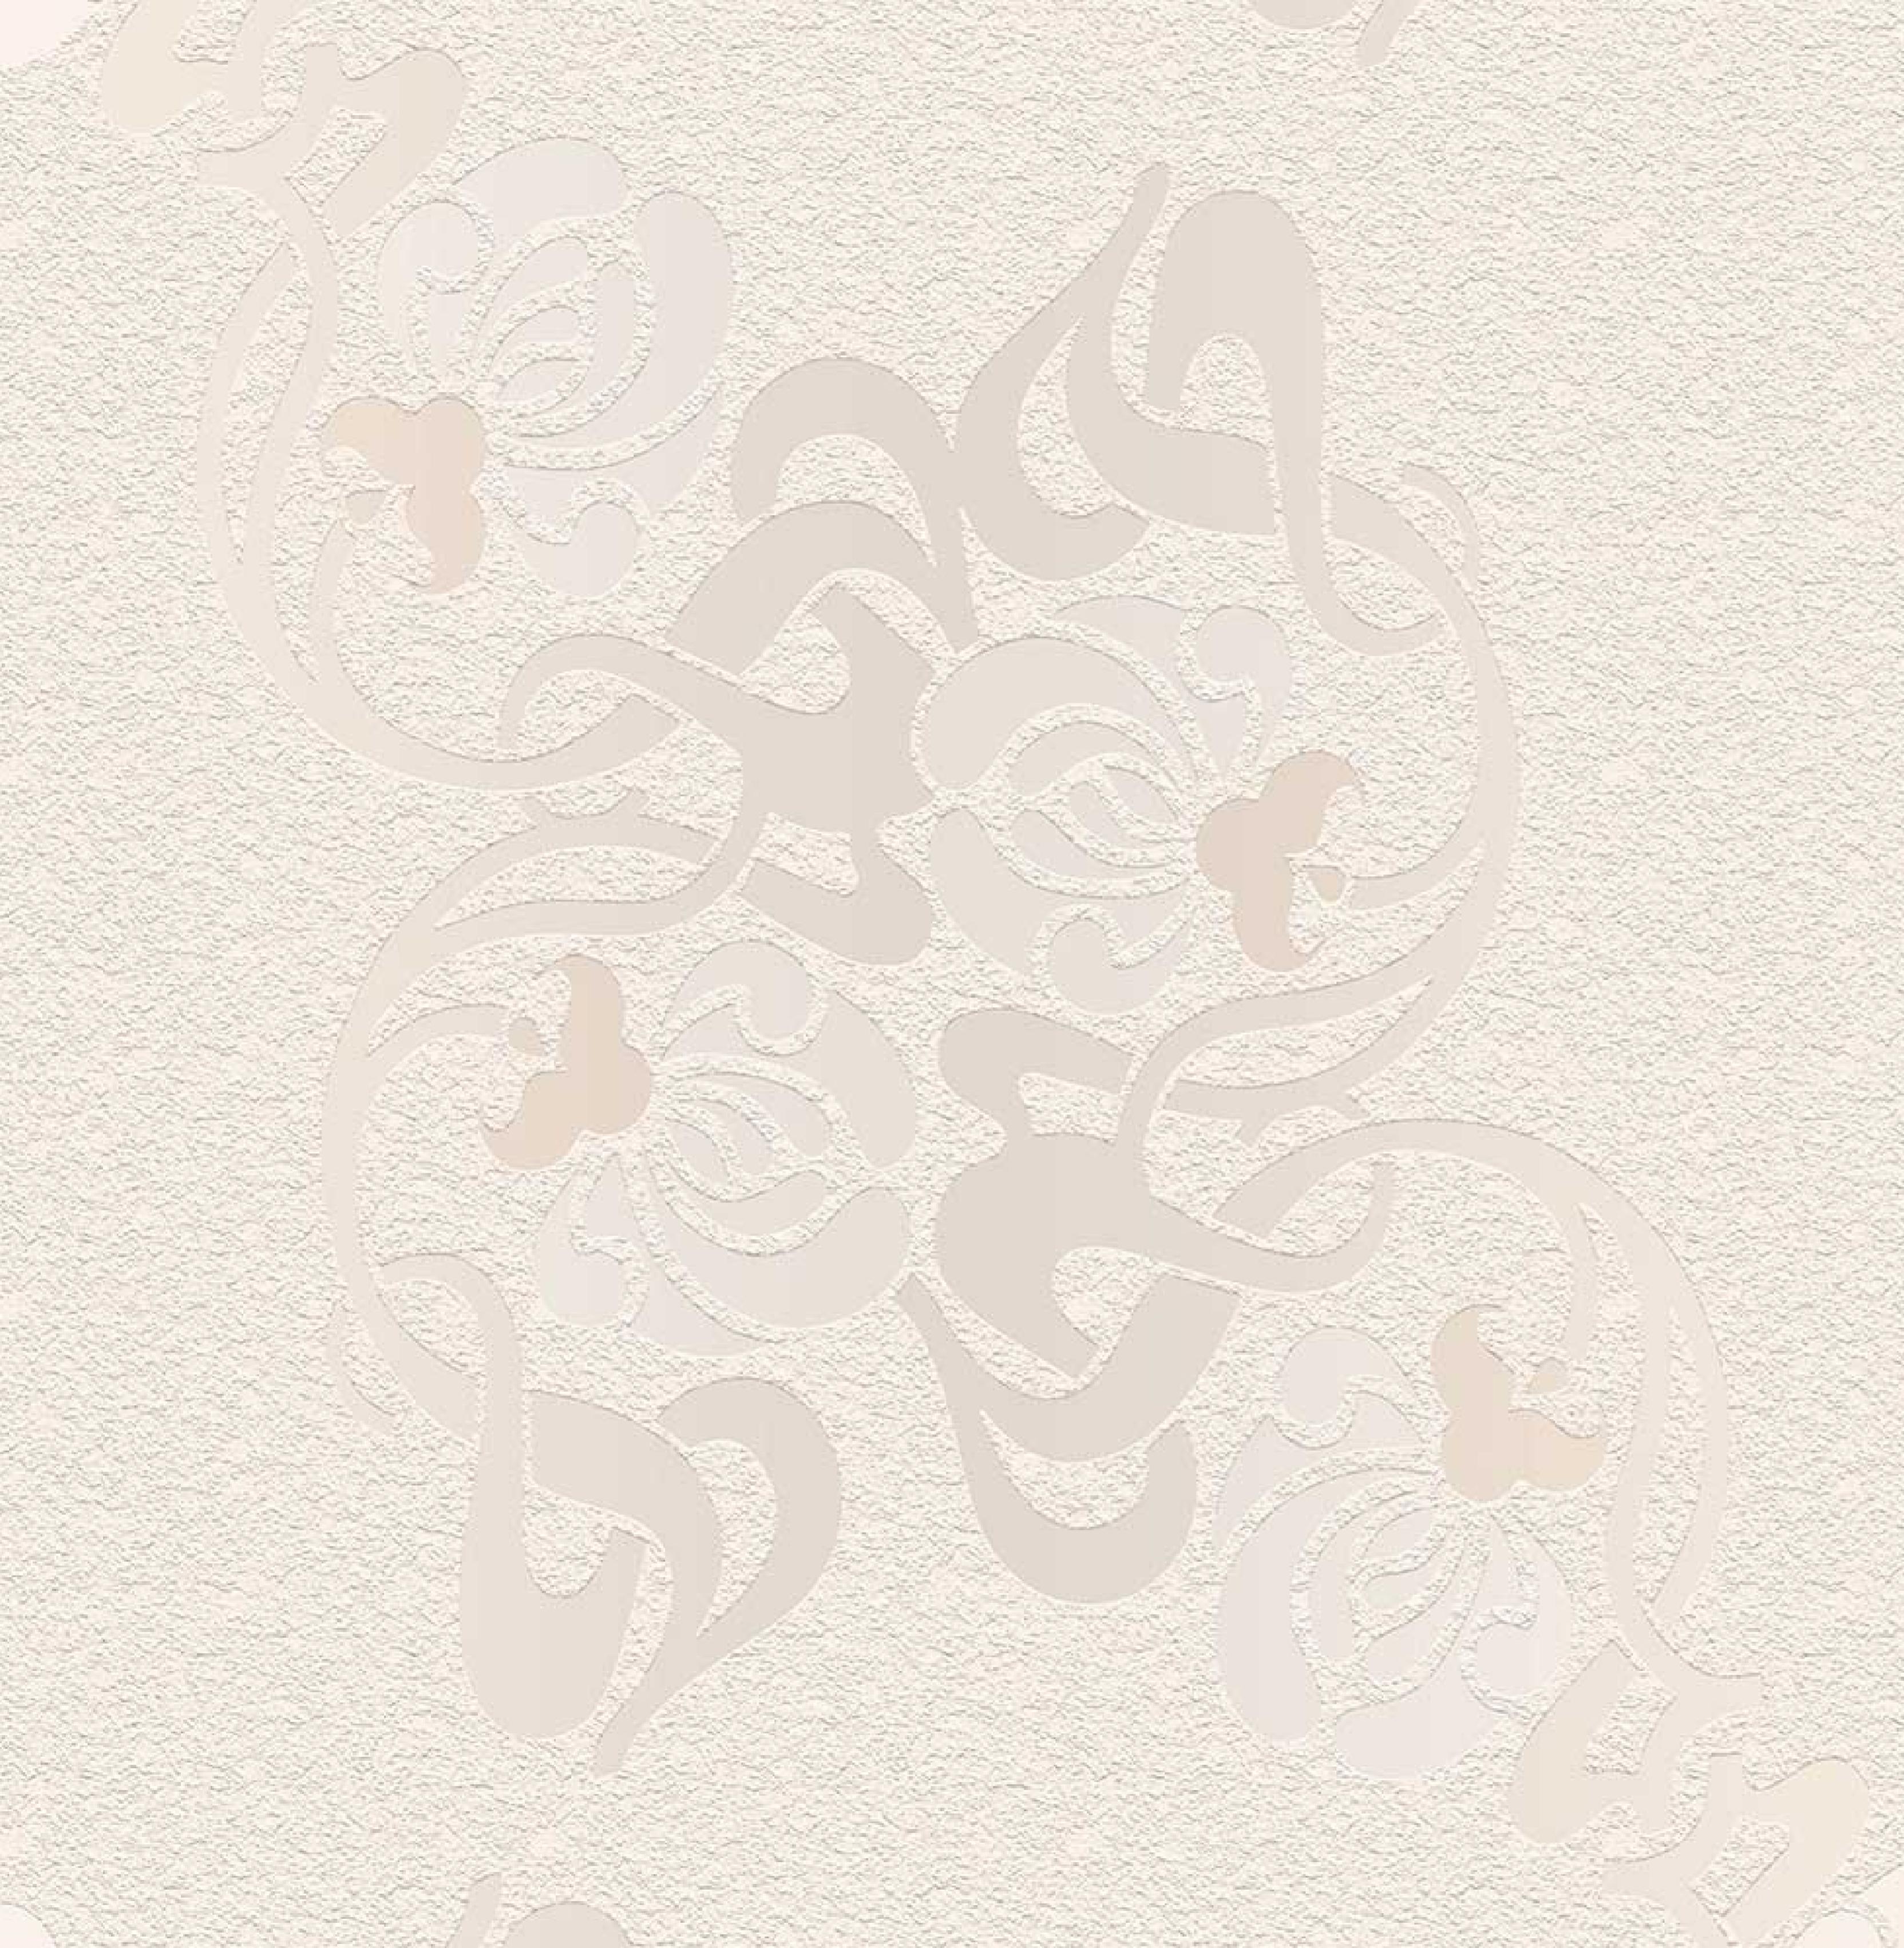




Phönix





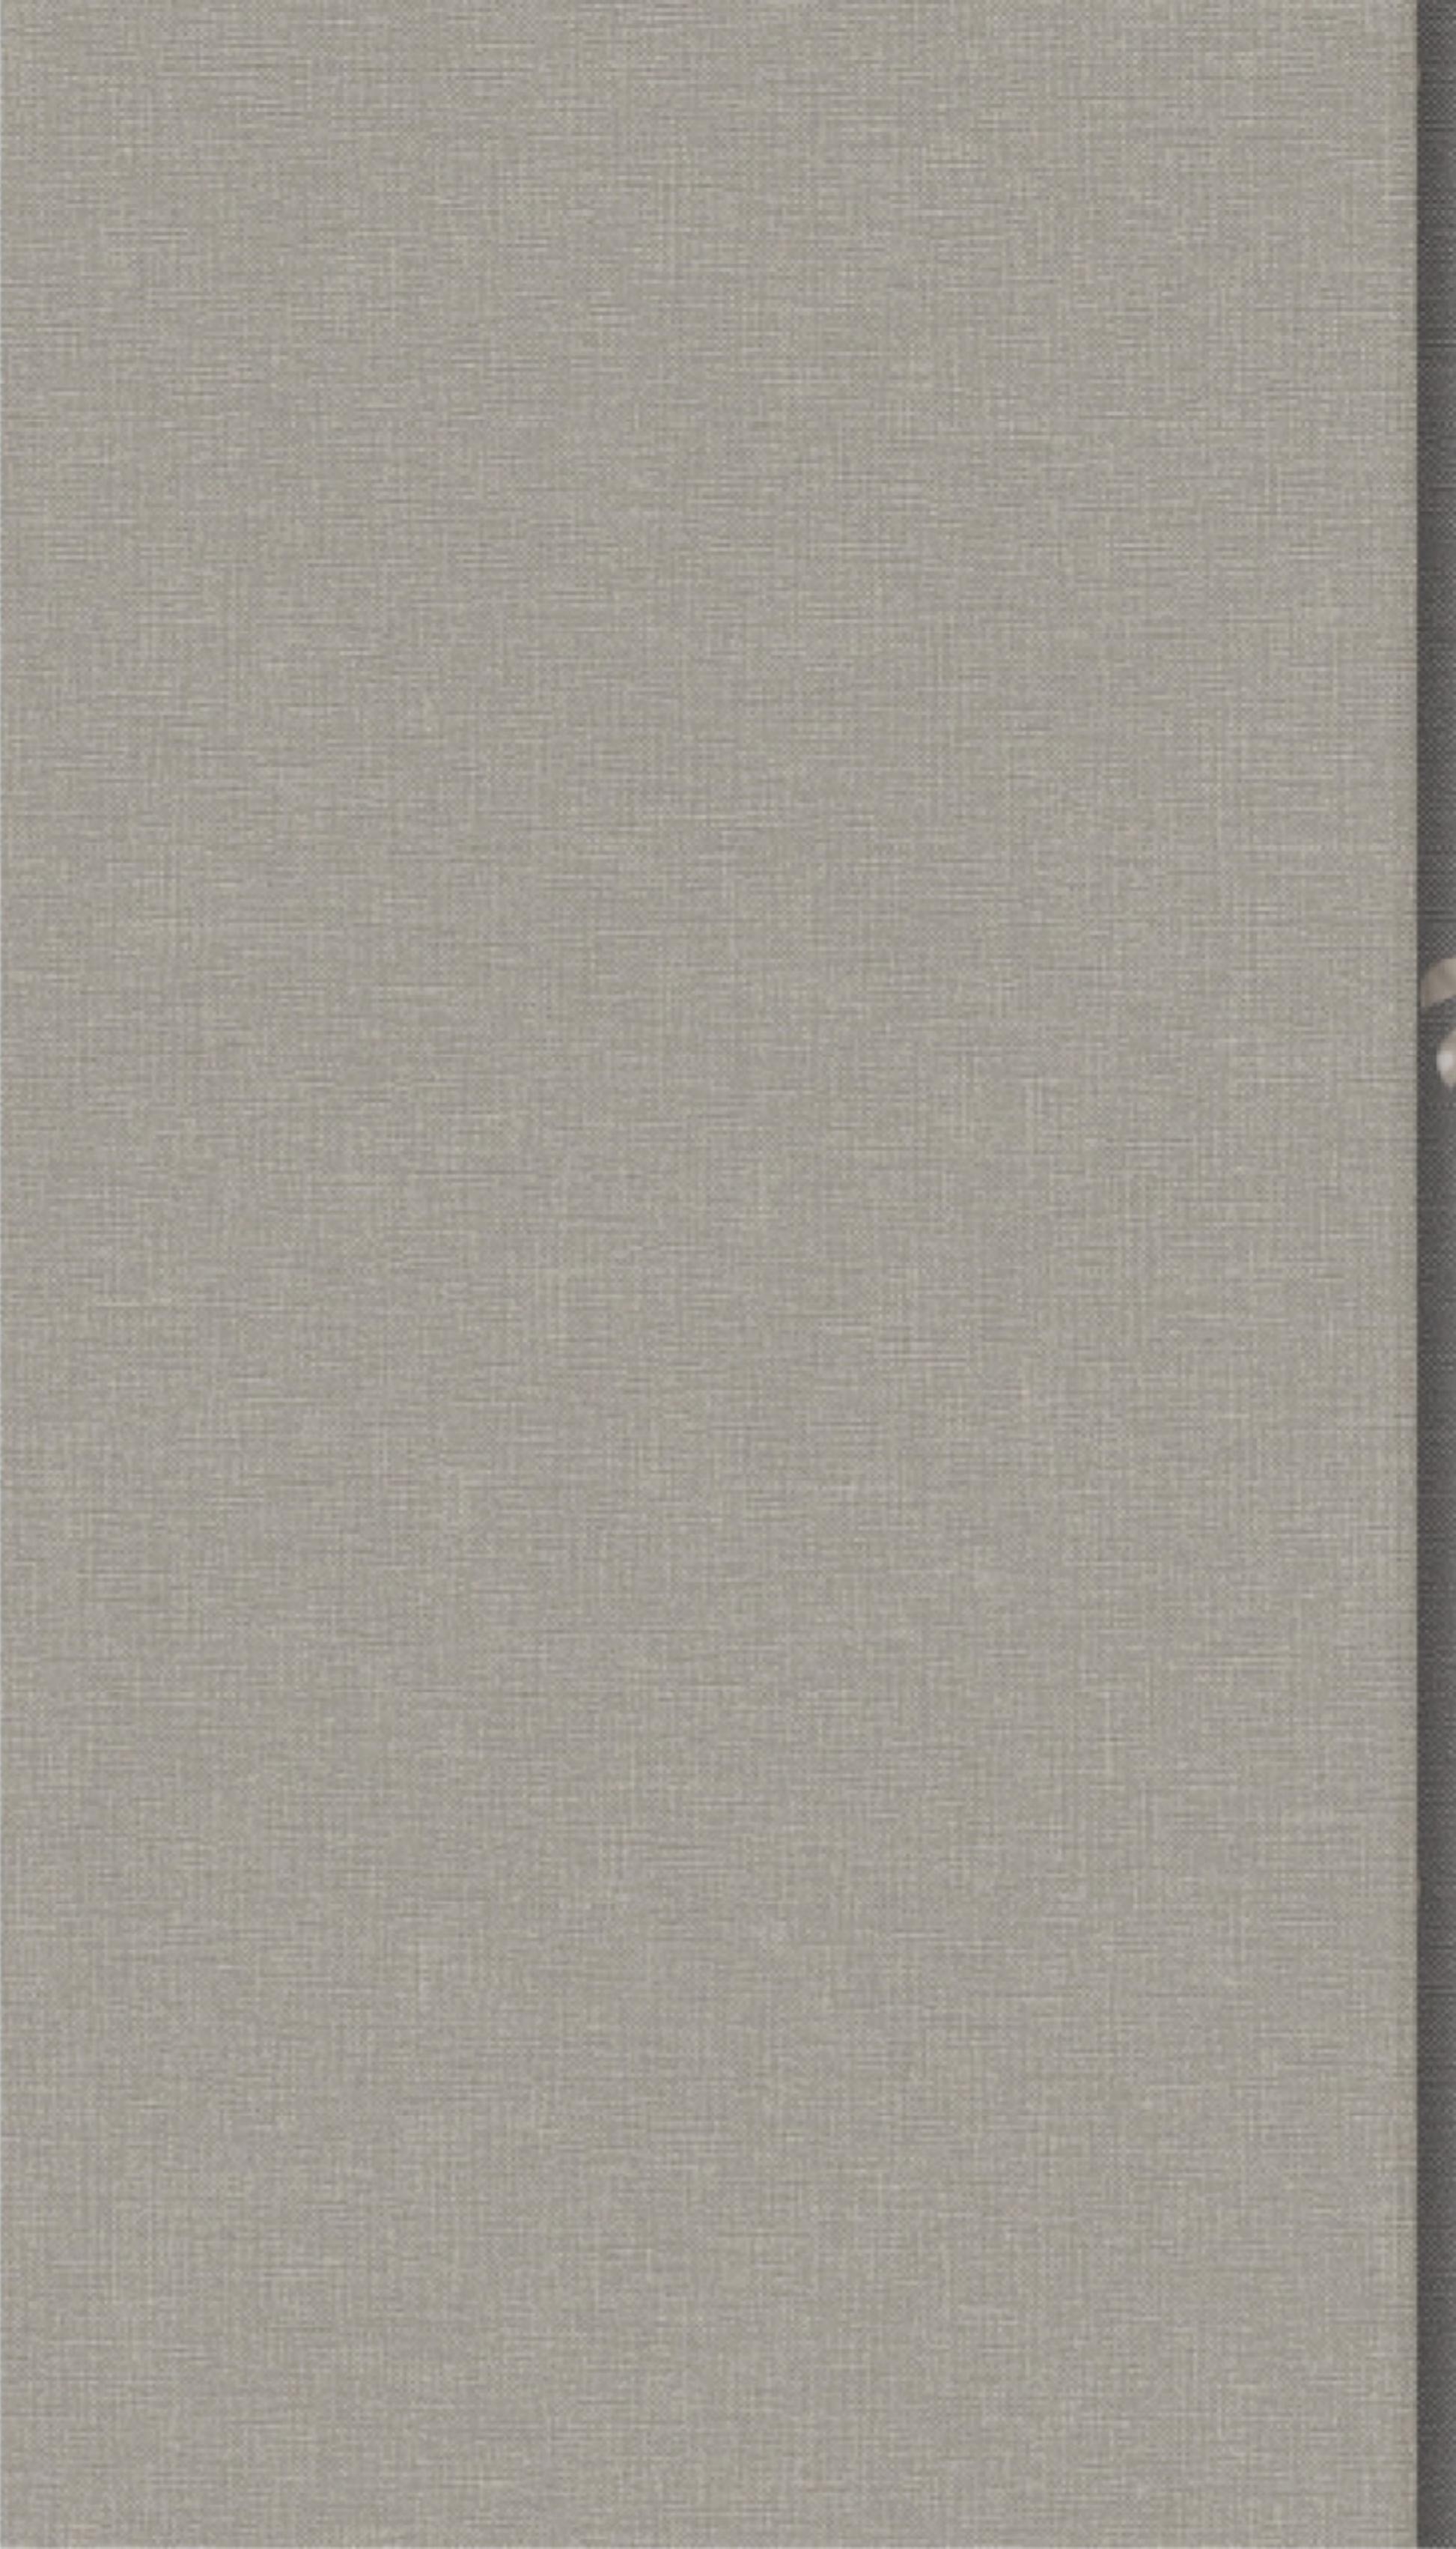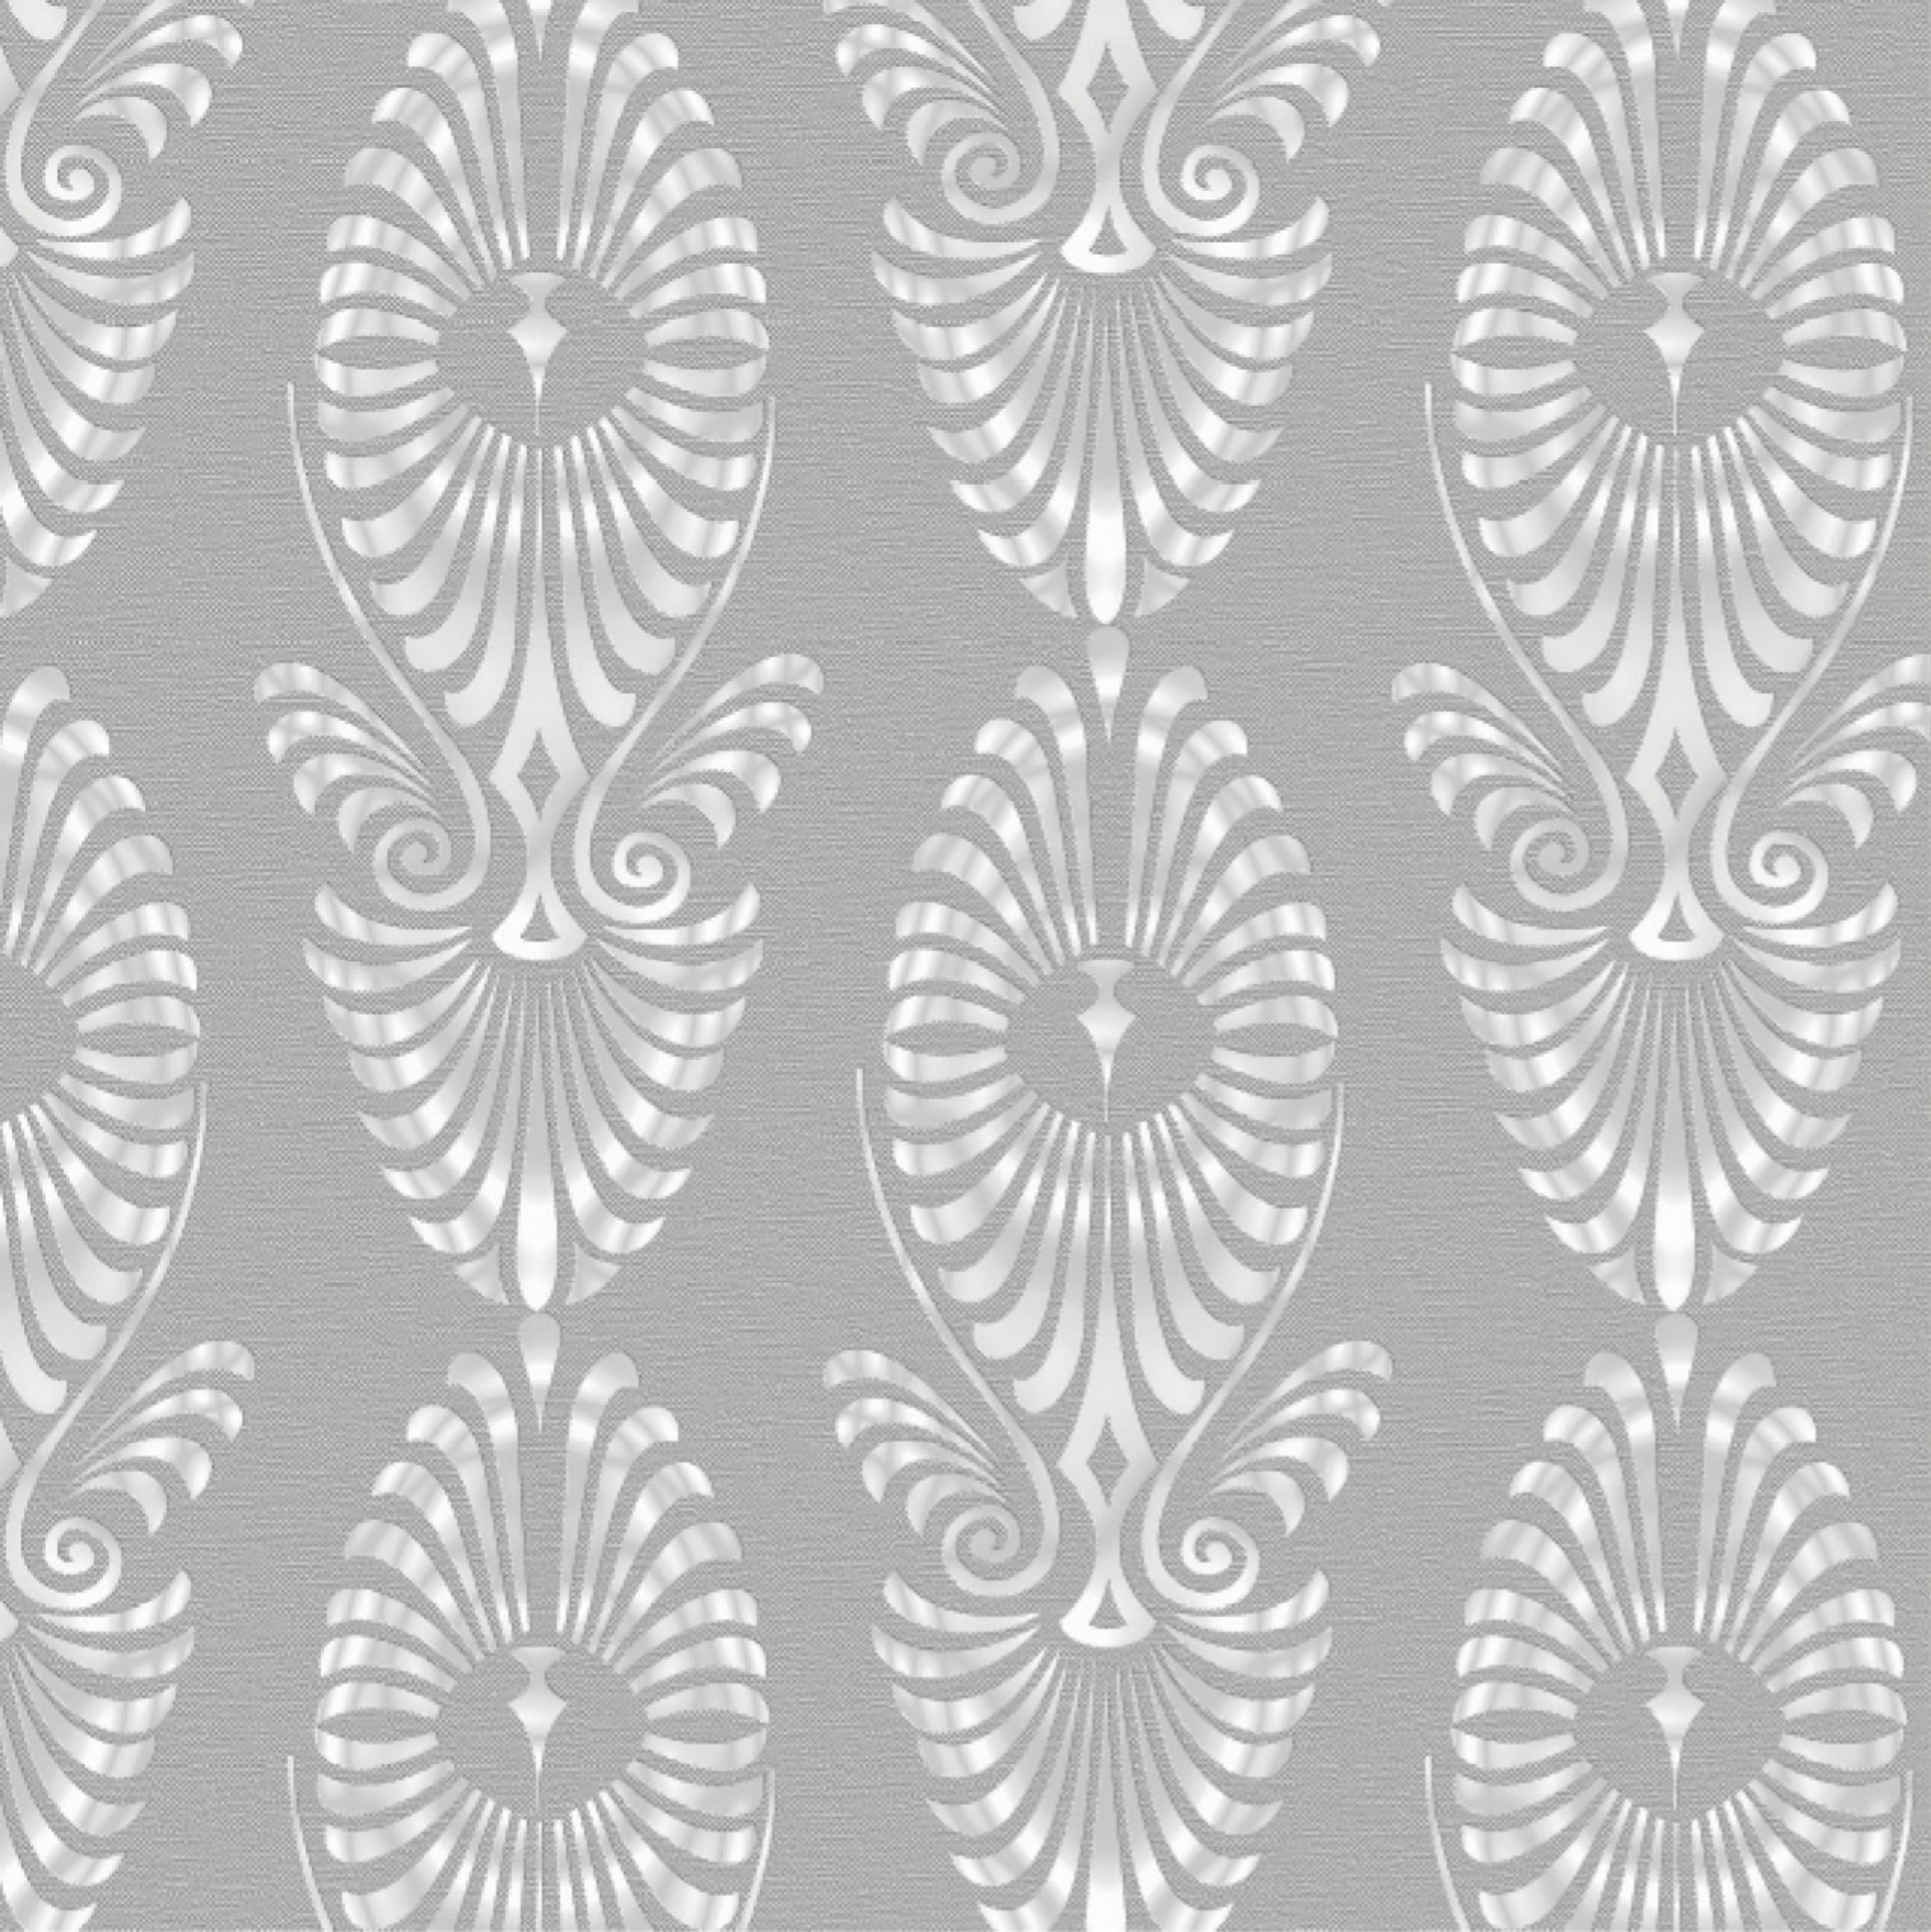













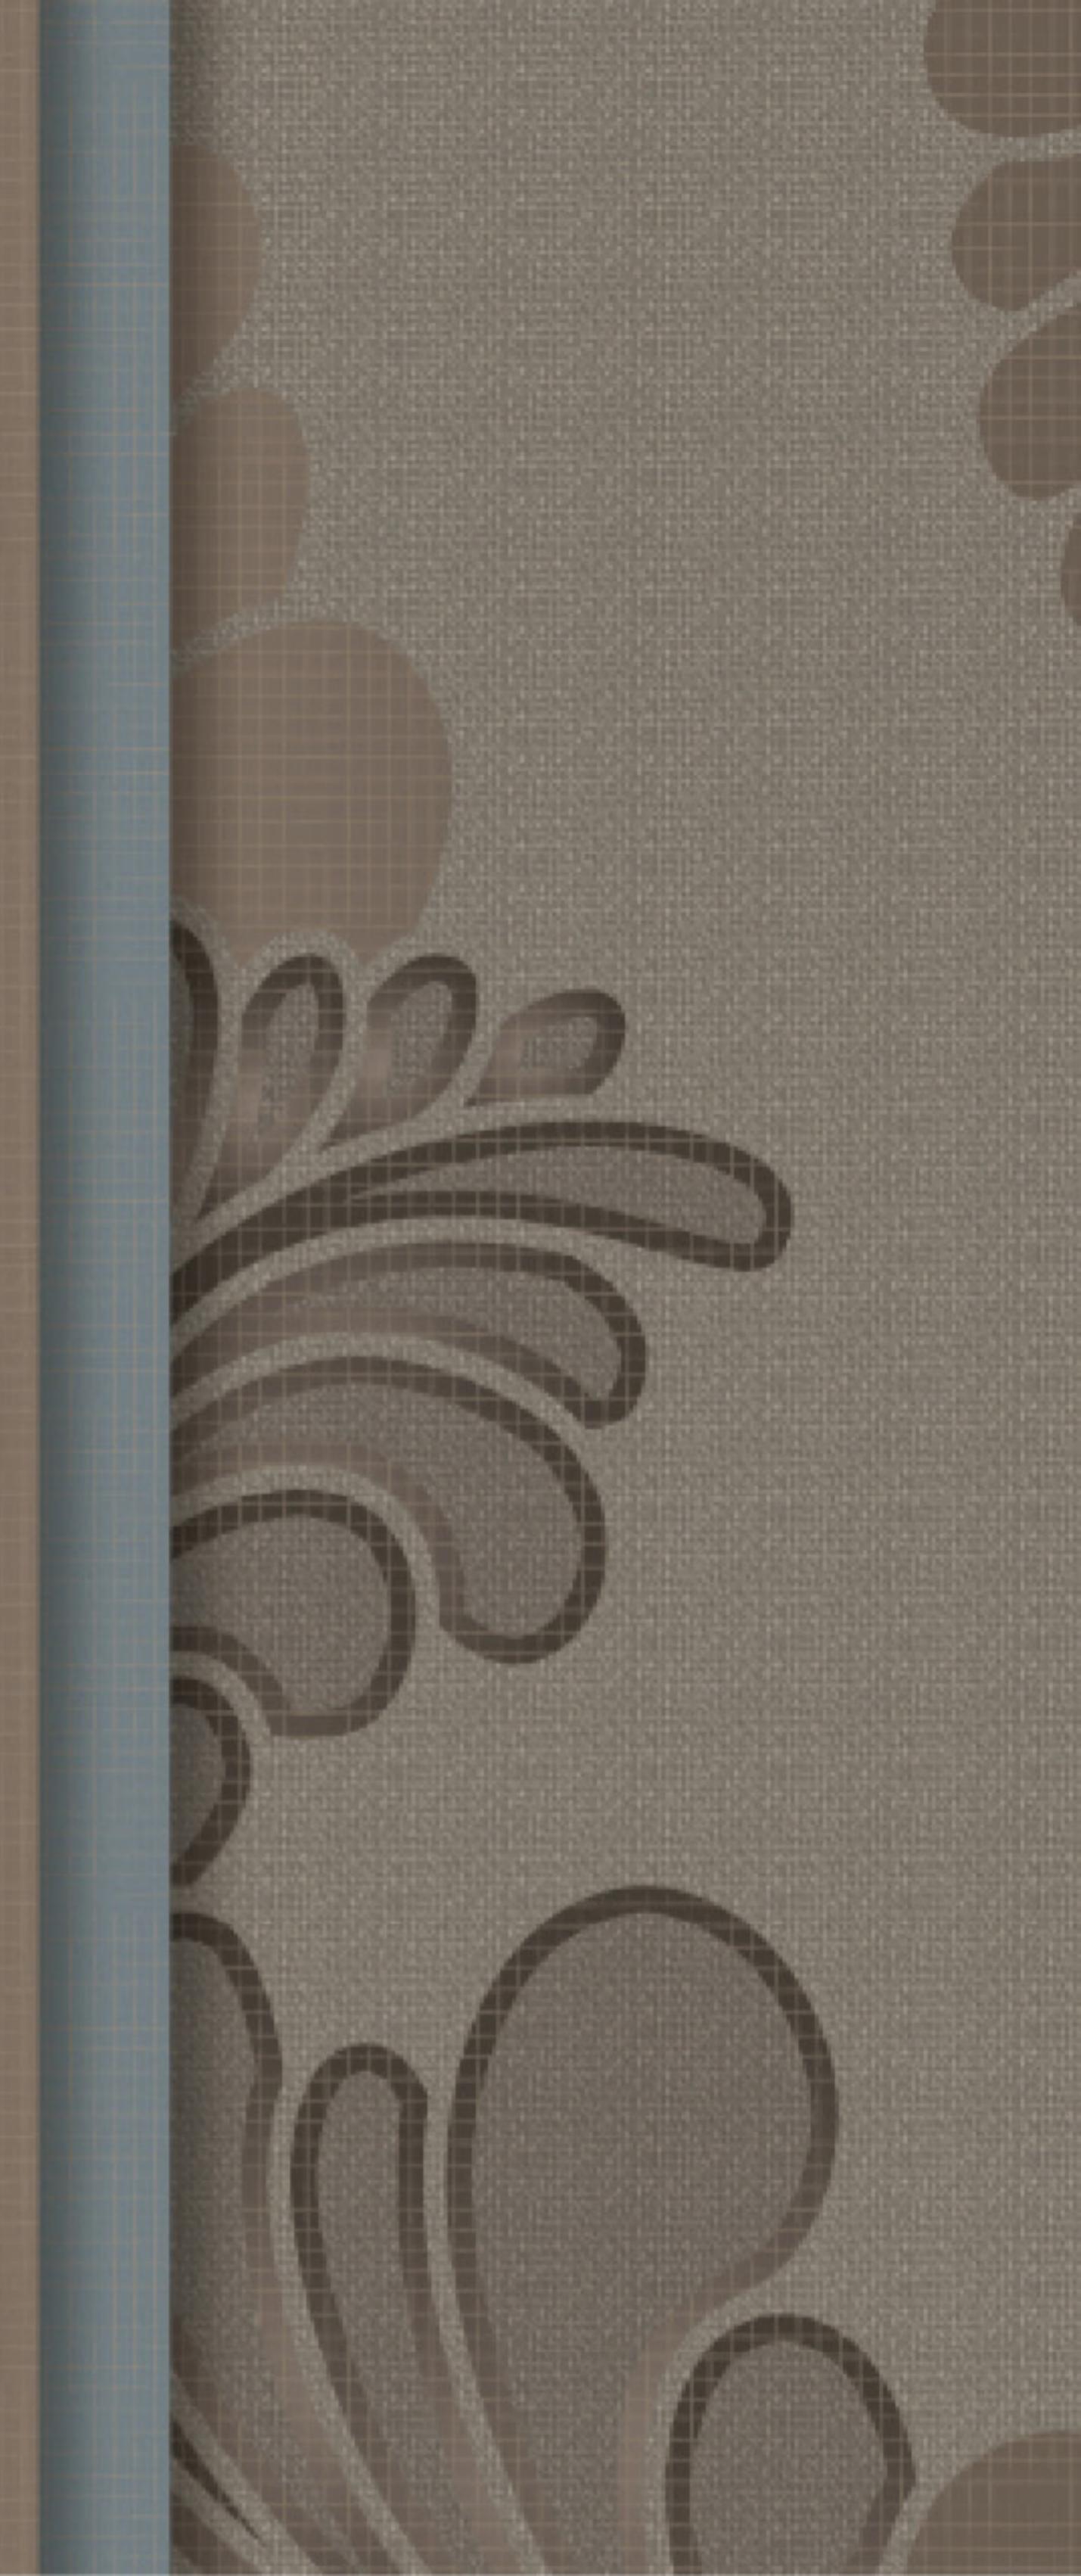

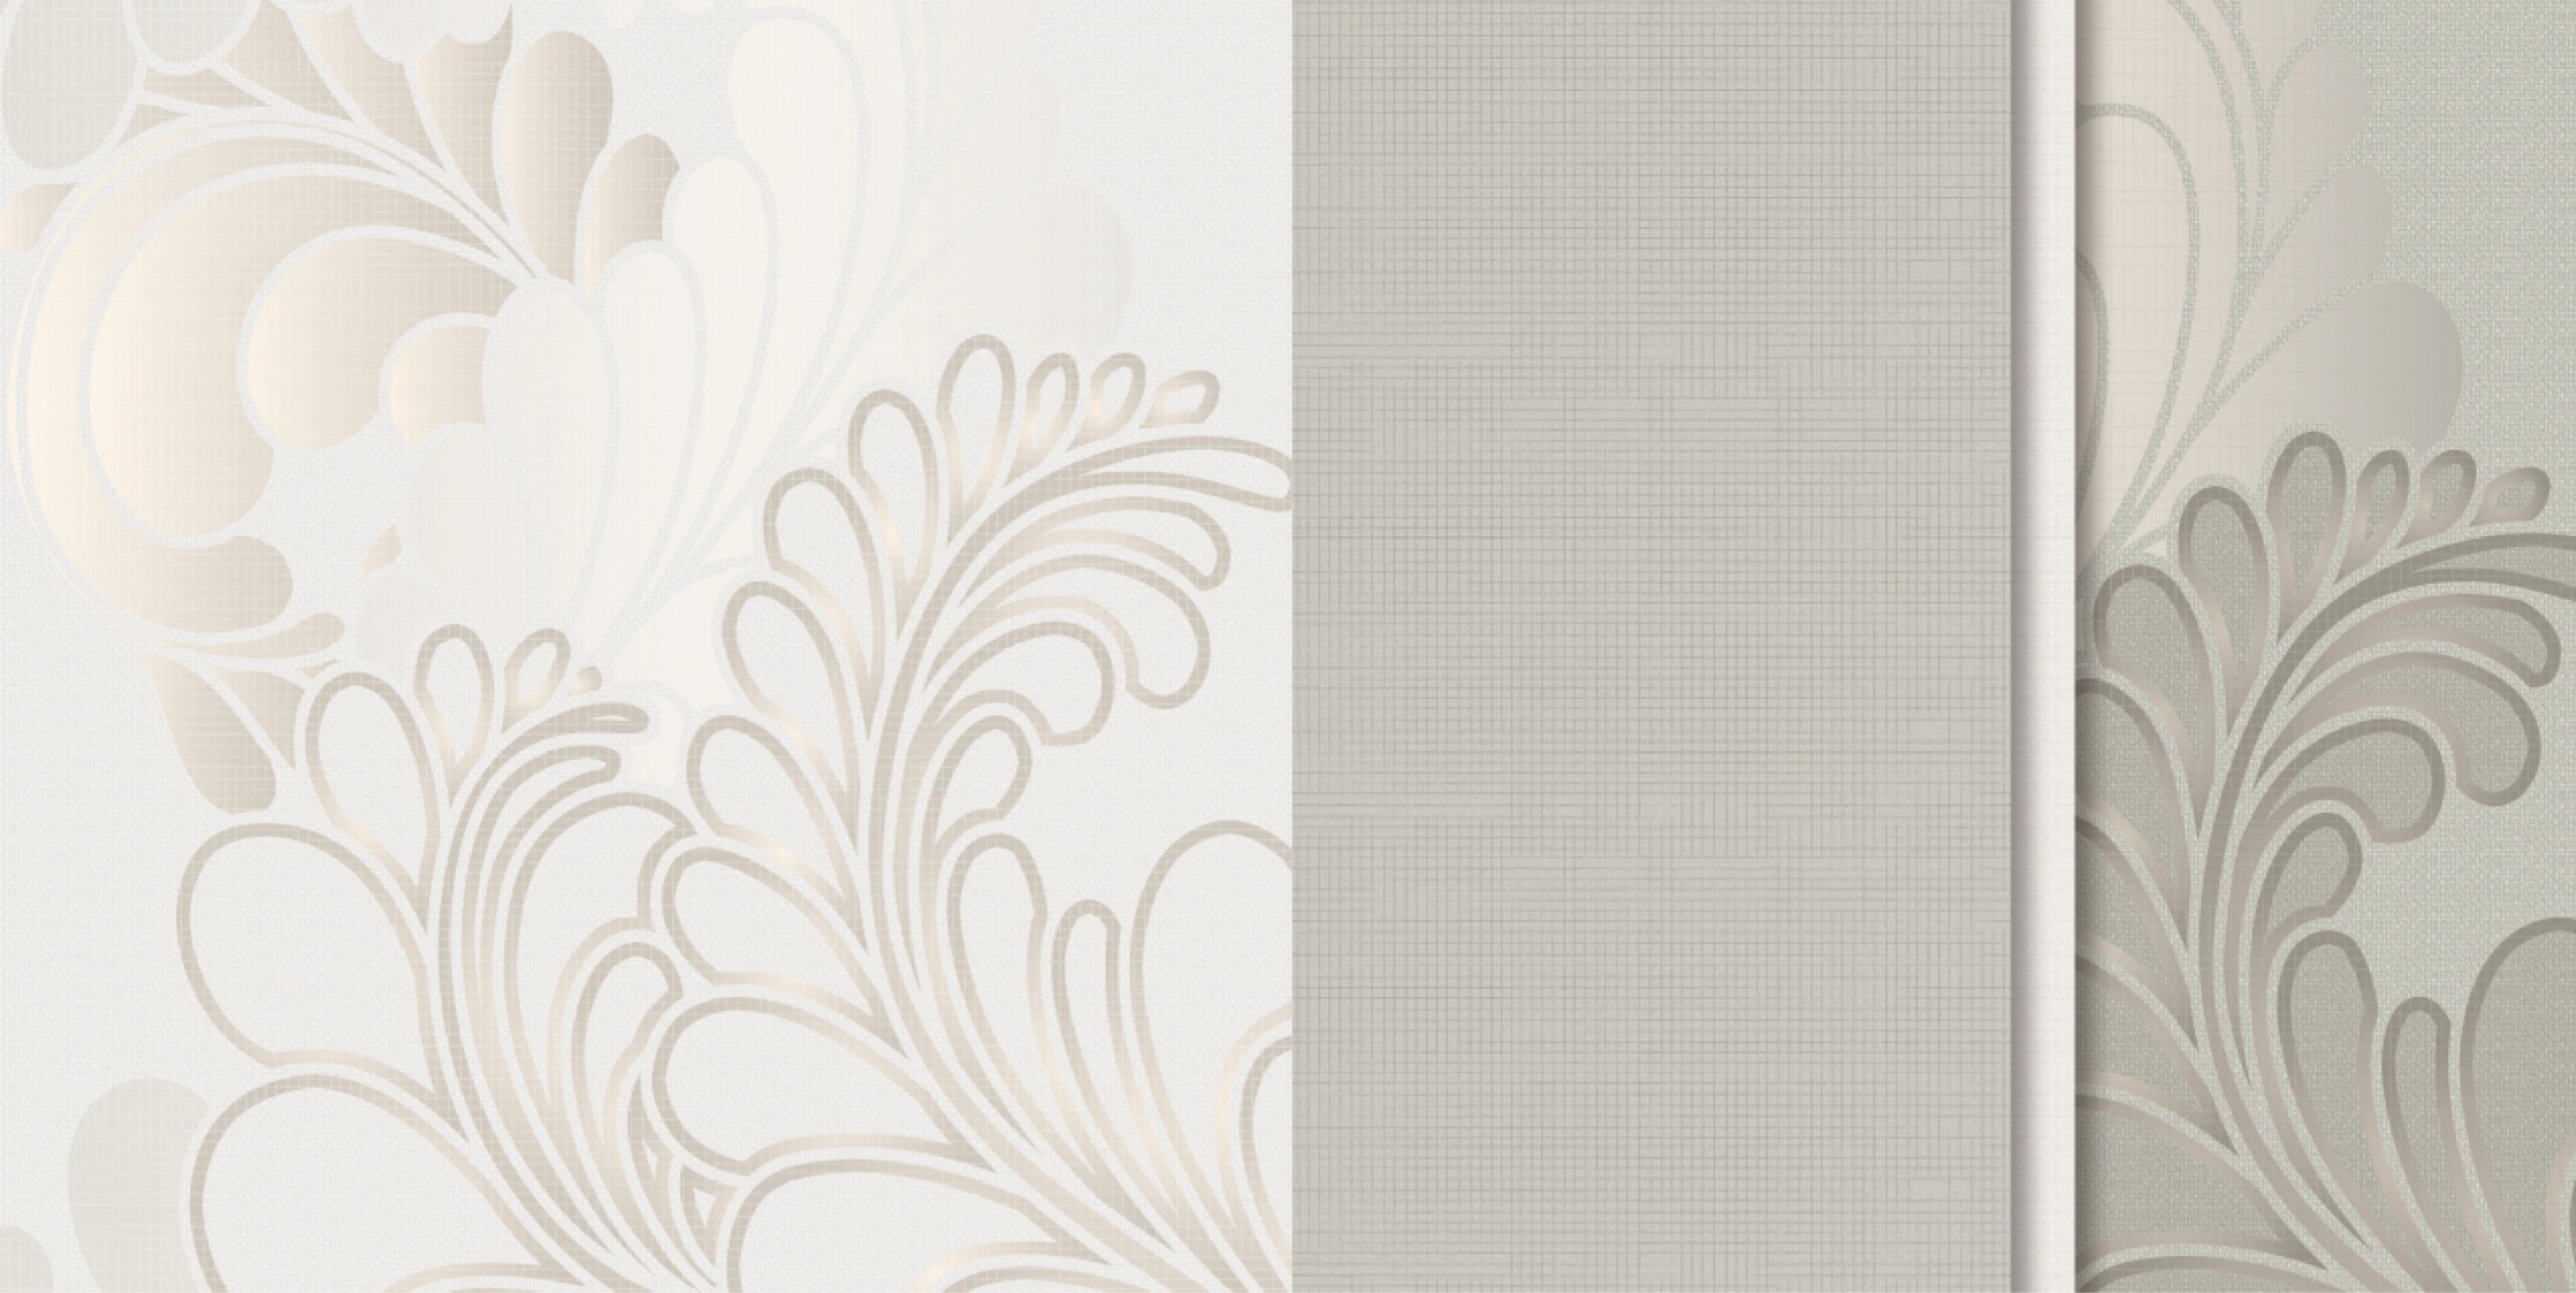

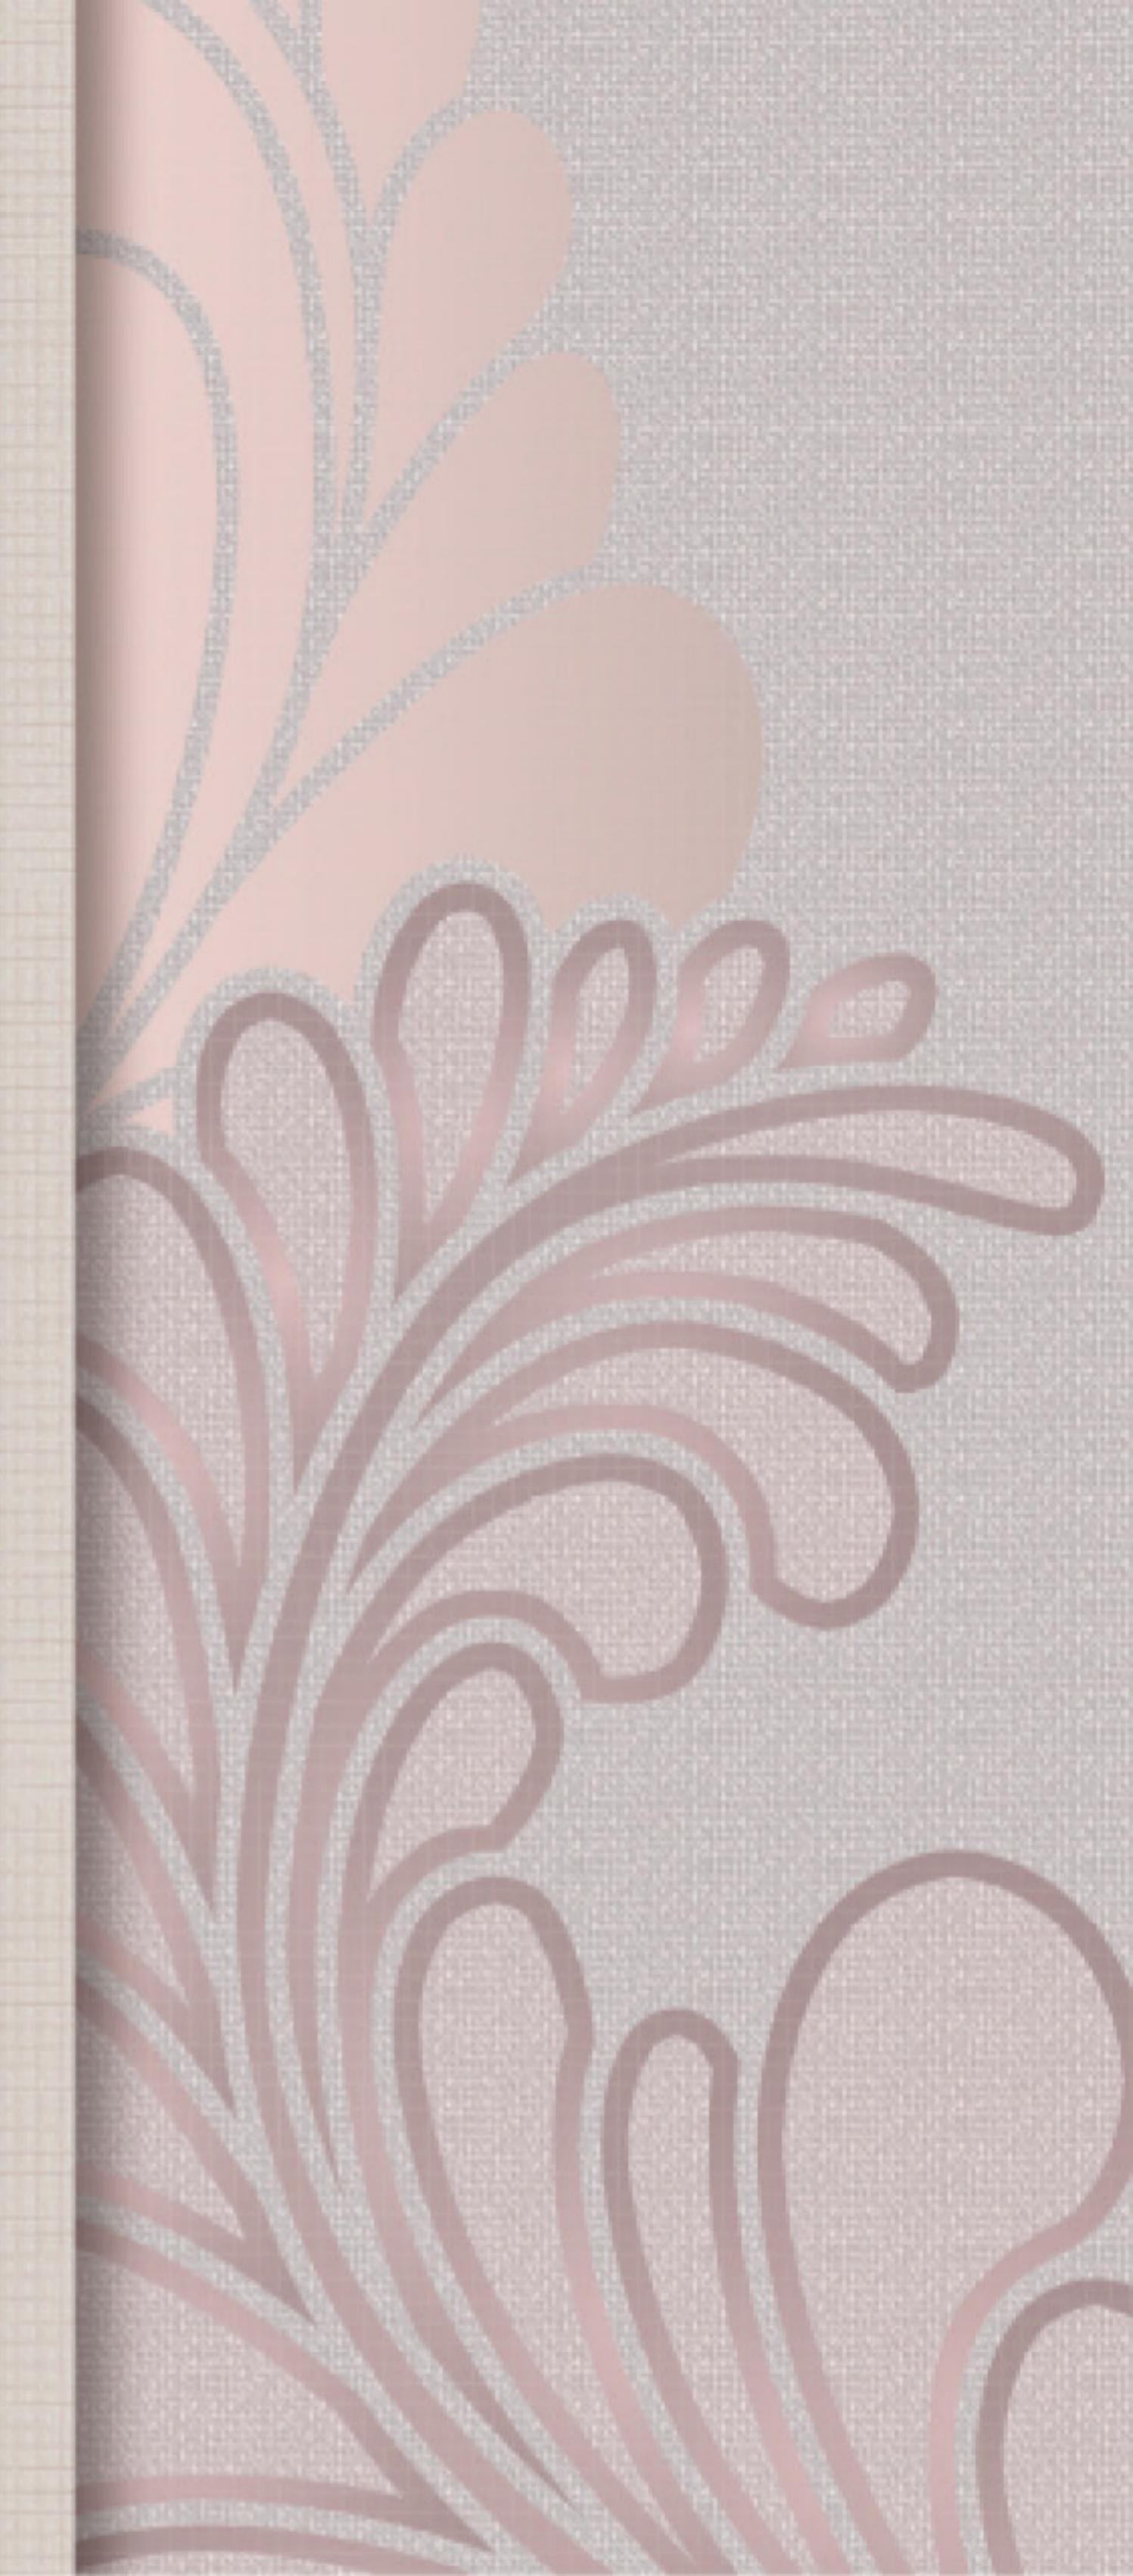




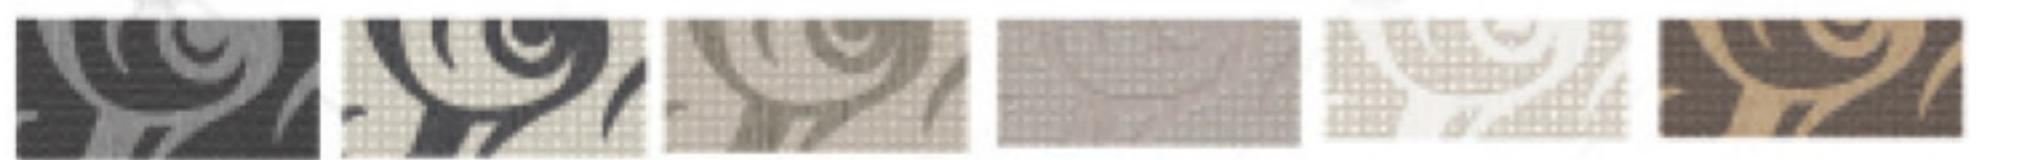

Sprial






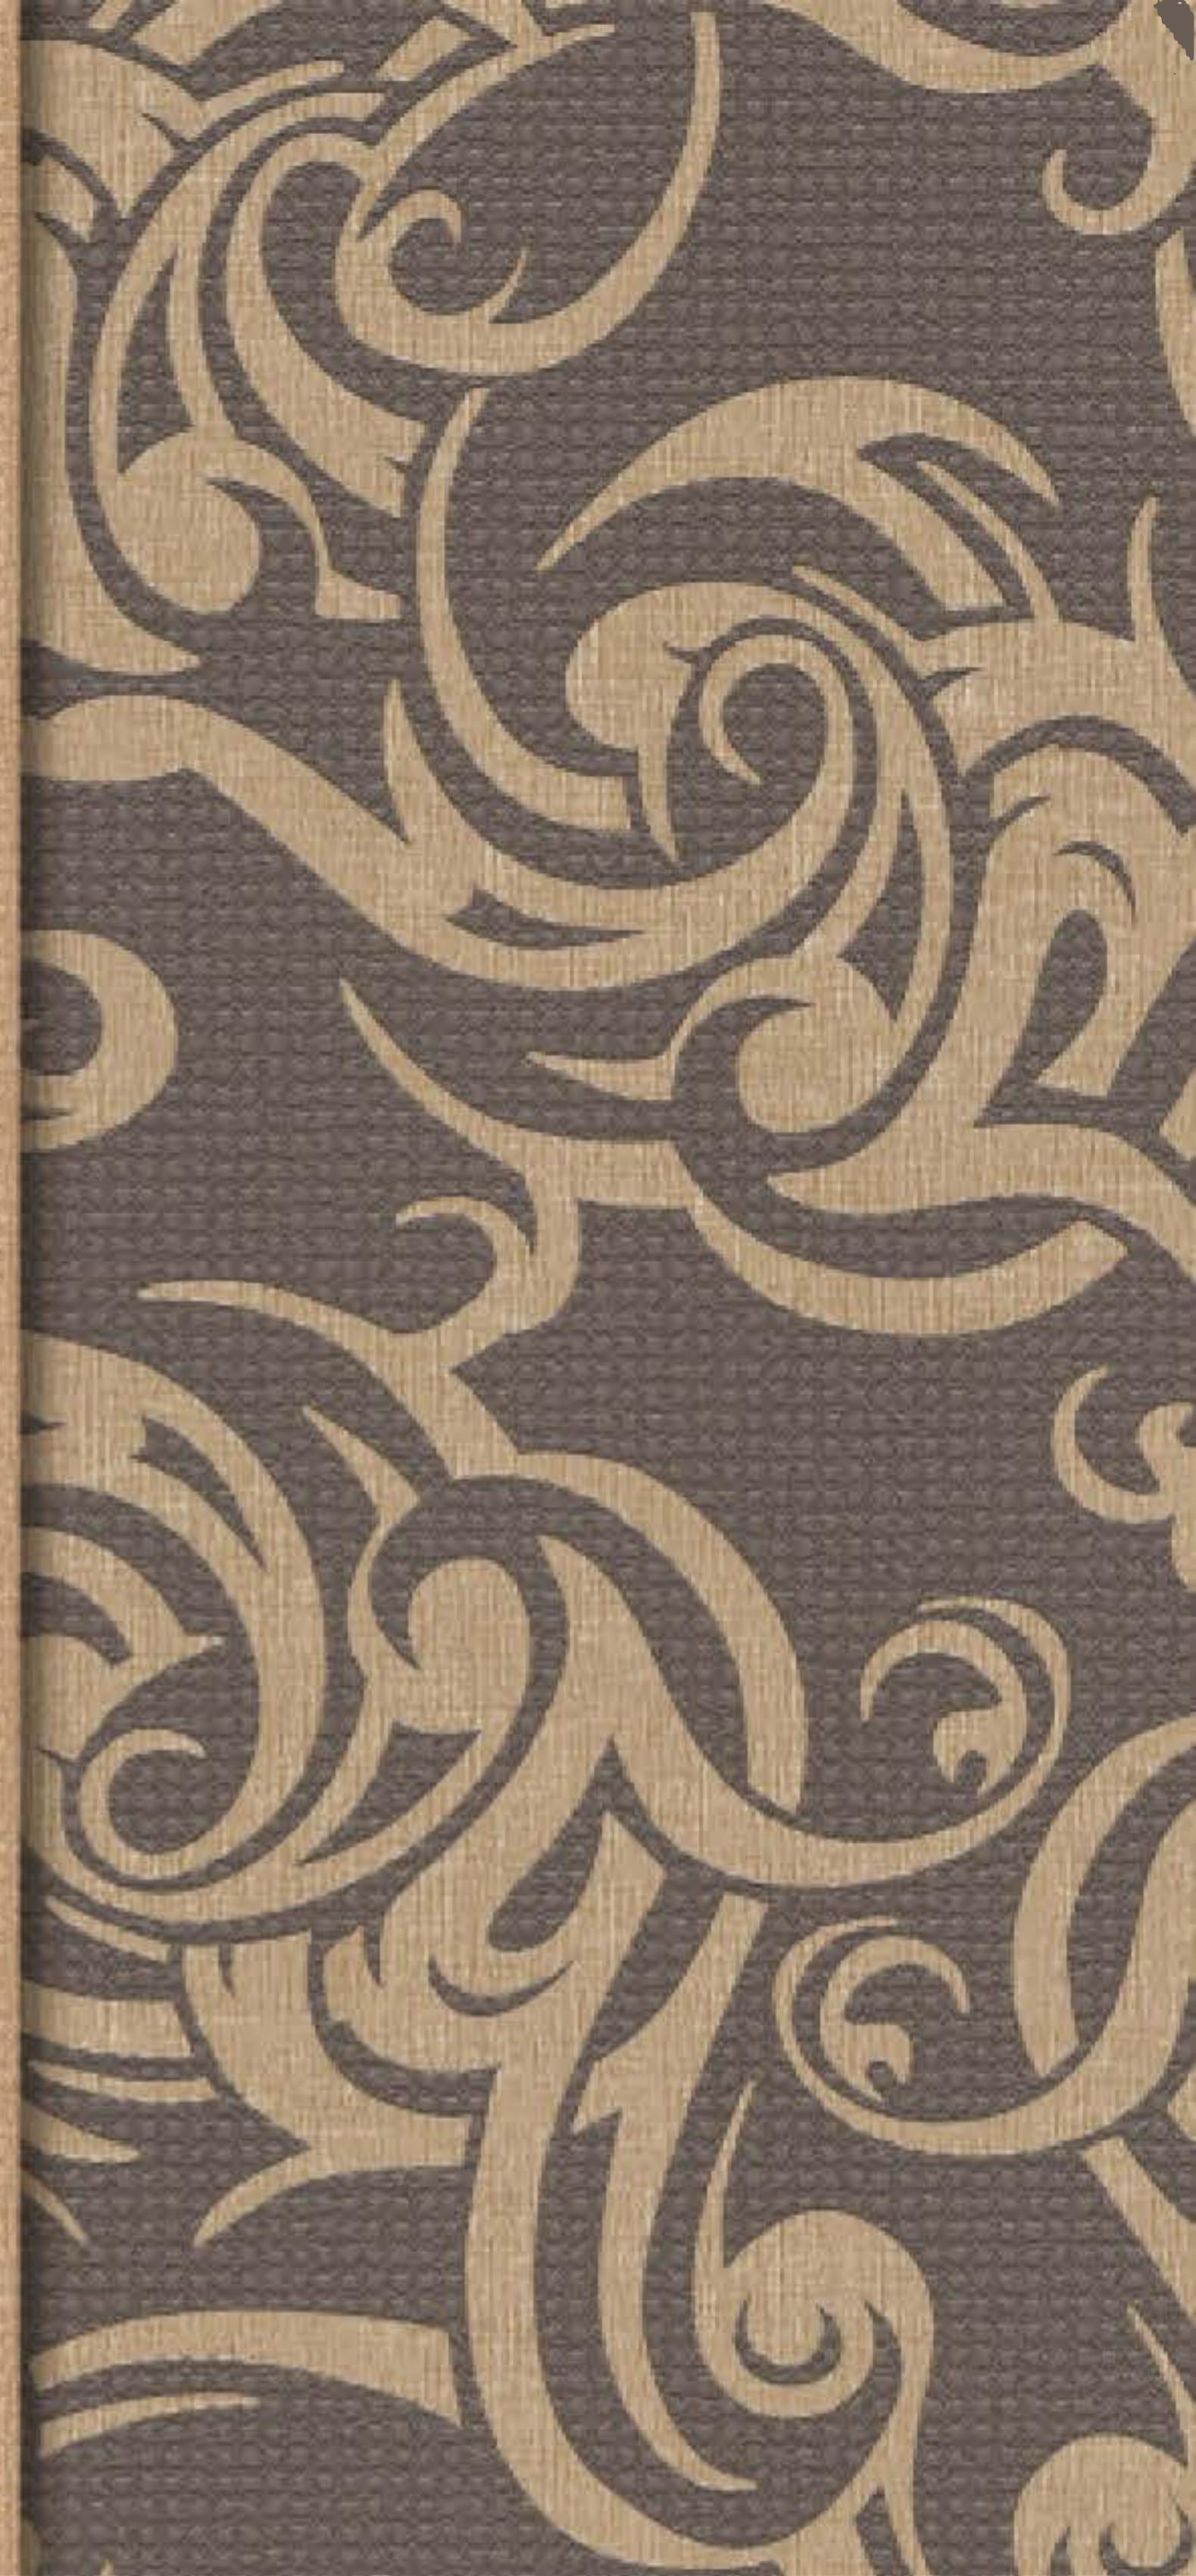







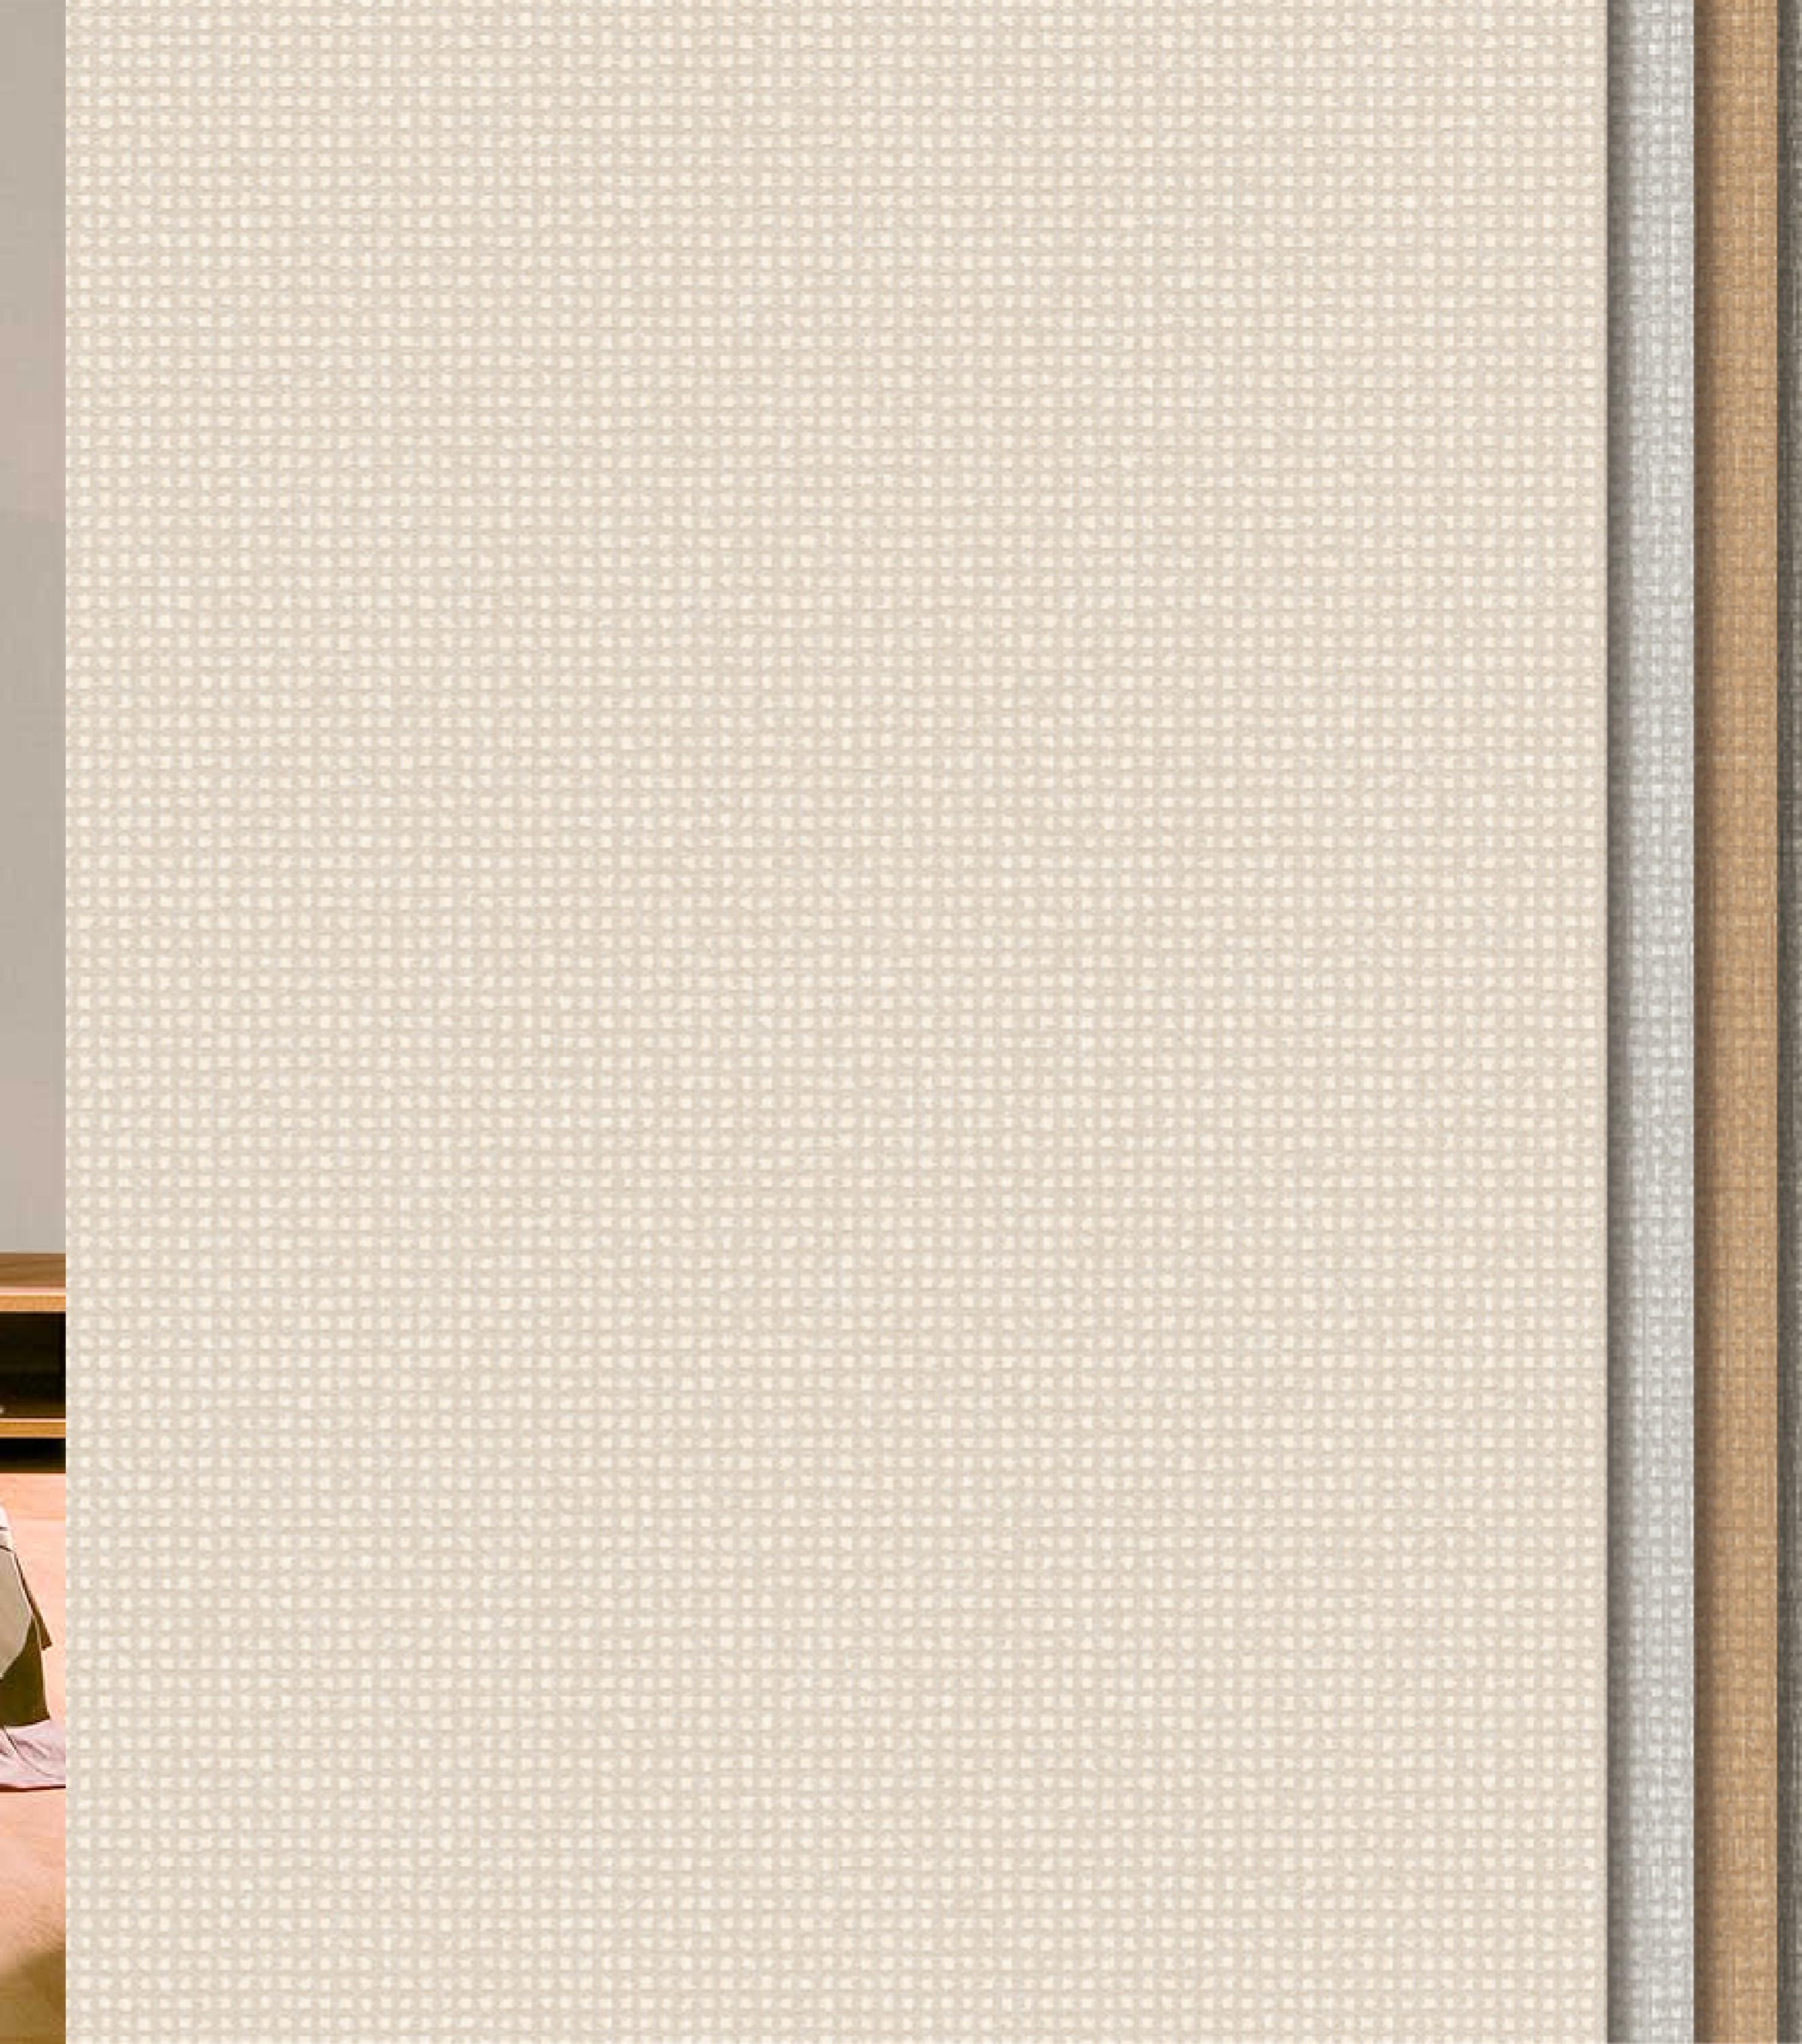



DIAMOND

DESIGNED BY VITALE

NON WOVEN WALLCOVERINGS

GENERAL INFORMATION

ROLLS WIDTH X LENGTH

1,06M X 10 M

SUBSTRATE TYPE

Non woven wallcoverings

WEIGHT

150 g/m²

PREPARATION

The walls must be dry, smooth, properly free of oil-free and in a neutral white color.

Clean up holes and/or cracks in the wall with a filler and sand them smooth.

First treat highly absorbent walls with a fixing primer. A priming fixation or a layer of undercoat is recommended.

This will reduce possible color differences or stains.

It also prevents the risk of wallcovering coming loose when there is new plastering.

Thorough preparation of the foundation is very important for this or light-colored wallcovering references, since these are more sensitive to possible transparency. Placing a plain coated wallcovering as a foundation or painting white is recommended.

When purchasing the various rolls of wallcovering, also note the manufacturing batch, which must be the same for each roll in order to prevent possible color differences.

THE INSTALLATION ITSELF

Carefully follow these next steps:

Cut the strips to the desired length. Take into account the survey height and whether or not there will be reversing.

(Instructions are located on the front of the label.) Roll the drawing towards.

Apply to the walls a universal ready-to-use wall adhesive that has an acrylate base suitable for non woven wallcoverings. Follow the instructions from the adhesive manufacturer.

1. Align the strips next to each other (without overlapping) and press them using a brush or spatula.

2. Start from the middle and brush to the sides so that all the air bubbles disappear. Keep residual adhesive from getting on the wallcovering. If this does happen, however, carefully remove it by dabbing with a moist cloth. DO NOT ROLL.

Cut off the excess wallcovering by the ceiling and the baseboards with a utility knife.

3. Let dry, avoiding rapid and excessive warming or drafts during the drying and the installation itself.

SYMBOLS



Free match

Straight match

Drop match

Reverse for length


EASY TO REMOVE

4. Quality non woven wallcovering that was applied in the manner above can be easily removed when dry.

LIABILITY

Check the result after applying three strips. Complaints about more than three strips will not be accepted.

Further complaints is your own responsibility. Complaints must be reported immediately and directly to your distributor. Textile wallcovering is an especially delicate product. We recommend asking the help of an experienced professional for its installation.

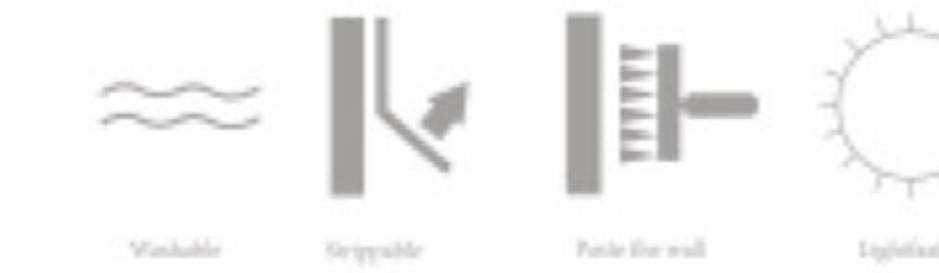

Washable

Gripable

Paste the wall


Lightfast



DIAMOND



VITALE'



VITALE